

Galaxy DX Radios DX2517


Documentation Project


[CBTricks.com](http://www.cbtricks.com)

DISPLAY P.C.B. EPT0SSB42C

[Trace Layout](#)

[Schematic](#)

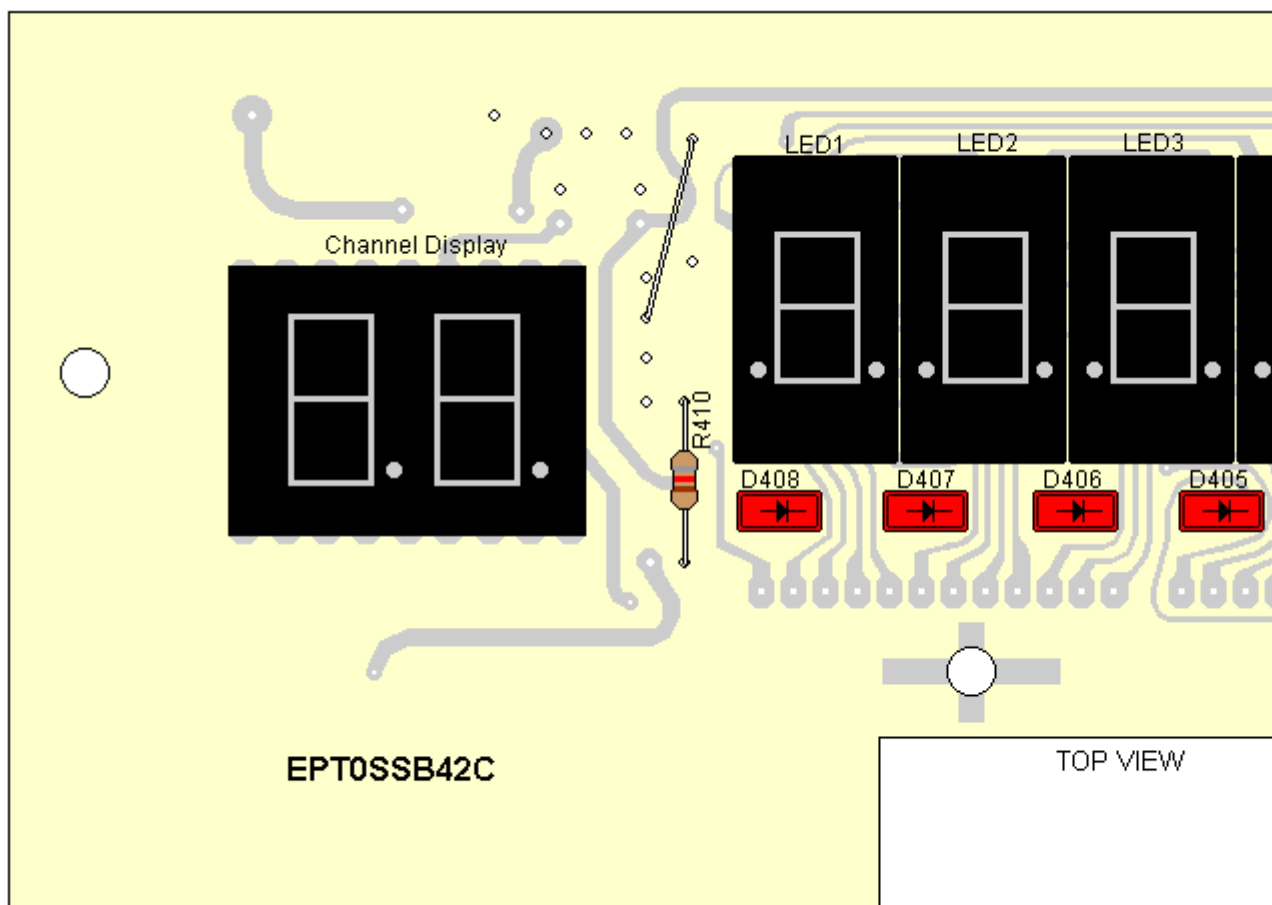

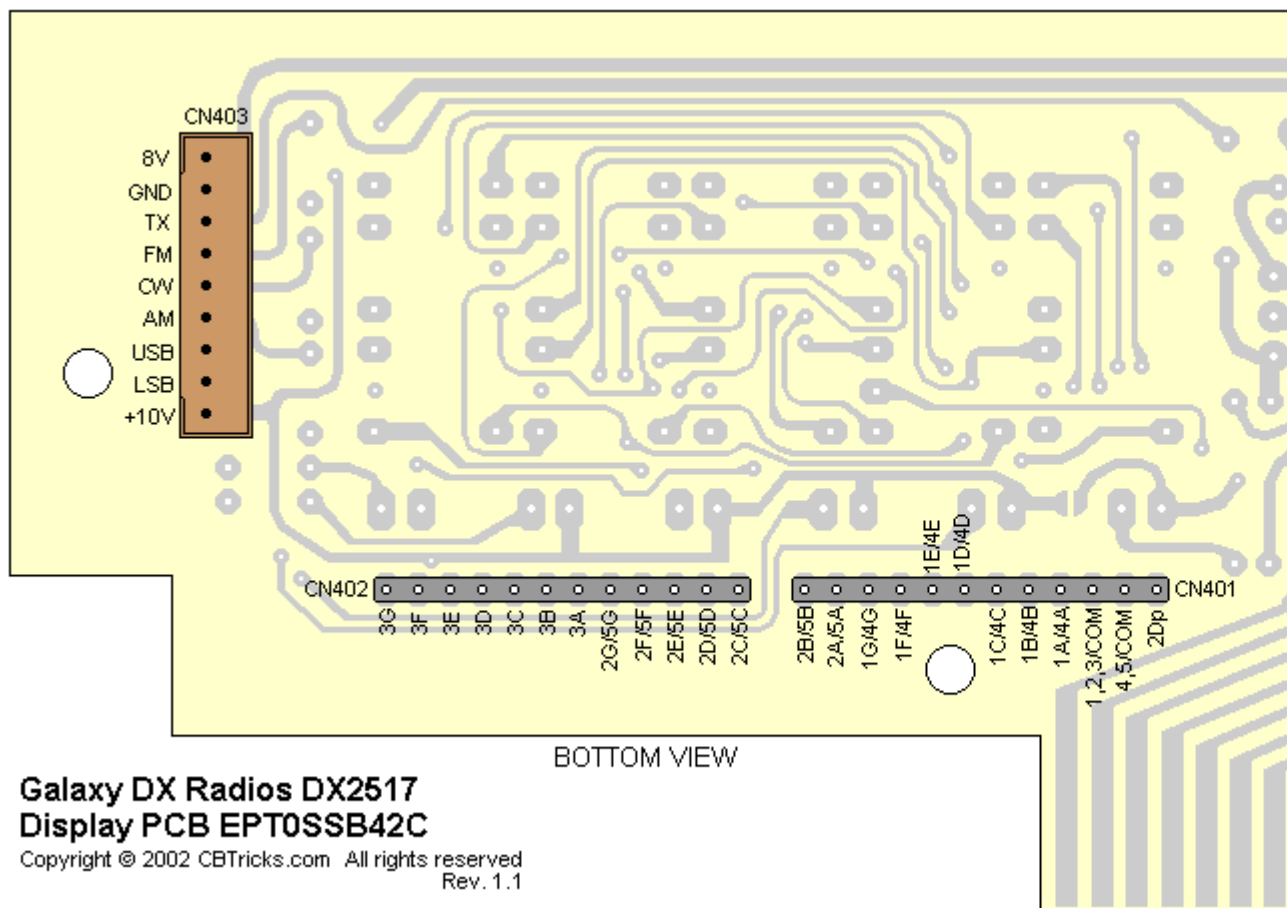

Resistors

Ref#	Description	MFR. Part No.
R405	C/F/R P-TYPE 820 OHM 1/16W P	RCP168214Z
R406	C/F/R P-TYPE 820 OHM 1/16W P	RCP168214Z
R407	C/F/R P-TYPE 820 OHM 1/16W P	RCP168214Z
R408	C/F/R P-TYPE 820 OHM 1/16W P	RCP168214Z
R409	C/F/R P-TYPE 820 OHM 1/16W P	RCP168214Z
R410	C/F/R P-TYPE 820 OHM 1/16W P	RCP168214Z

LED Displays

Ref#	Description	MFR. Part No.
LED1-5	LED DISPLAY LSD3922(GREEN)	EX03N40485
LED1-5	DISPLAY HOLDER H-1031-1	GZZZ50173Z

Connectors

Ref#	Description	MFR. Part No.
CN401	PCB CONNECTOR/S 12P PH=2mm	EX07N48928
CN402	PCB CONNECTOR/S 12P PH=2mm	EX07N48928
CN403	PCB CONNECTOR/S 9P PH=2	EX07N48543

Jumpers

Ref#	Description	MFR. Part No.
R403-TR401	JUMPER WIRE 7x12x7	WX01070712

Copyright © 2002 CBTricks.com

Disclaimer: Although the greatest care has been taken while compiling these documents, we cannot guarantee that the instructions will work on every radio presented.