

FREQUENCY BAND TABLE

U701 #4 U701 #3	INPUT VOLT LOWER 1V R709: . R710: 100K	INPUT VOLT LOWER 2V R709: 220K R710: 100K	INPUT VOLT LOWER 3V R709: 100K R710: 100K	INPUT VOLT LOWER 4V R709: 39K R710: 100K
INPUT VOLT LOWER 1V R 711: R 712:100K	SWEDEN 31MHz	ITALY 43MHz	240 CHANNEL	40 CHANNEL
INPUT VOLT LOWER 2V R 711:220K R 712:100K	GERMANY 80FM/12AM	POLAND 240 CHANNEL	POLAND 40 CHANNEL	10 METER 28MHz AM 29MHz FM
INPUT VOLT LOWER 3V R 711:100K R 712:100K		SWISS 22 CHANNEL	6 METER	240 CHANNEL + 10 METER

VOLTAGE FOR START MODE OPTION

U701 #2	R707 : R708 : 100K (0 VOLT)	R707 : 150K R708 : 100K (1.9 VOLT)	R707 : 56K R708 : 100K (3.1 VOLT)	R707 : 10K R708 : 100K (4.4 VOLT)
MODE	FM START IN A/F MODE	AM ONLY	FM ONLY	AM START IN A/F MODE

MODIFICATION RF-POWER

MODIFICATION	SW 1	SW 2
MODE		
FM 4 / AM 4 WATT	SHORT	SHORT
AM 4 / AM 1 WATT	OPEN	SHORT
FM 4 WATT ONLY	OPEN	OPEN