

Parts No	Description	Parts No.	Description
Q15	2SC1957 or	RV1	Variable Resistor (B) 1 k Ω
	2SC495 (T)	RV2	Semi-Fix " (B) 1 k Ω
Q16, 17, 8	2SC945P, Q, R or	RV3, 5, 6	" " (B) 20 k Ω
	2SC372Y	RV4	Variable Resistor (A) 10 k Ω
Q19, 20	2SC1173Y	RV7	" " (B) 5 k Ω
		RV8	" " (C) 10 k Ω
R1, 2	Resistor $\frac{1}{4}$ 680 Ω	SP	Speaker 90 mm, 8 Ω
R3, 4, 50, 86	" " 4.7 k Ω	SW1, 4, 5	Seesaw Switch
R7, 29, 44	" " 150 Ω	SW2	Rotary Switch for Channel
R8	" " 51 Ω	SW3	Rotary Switch for Meter
R9, 27, 36, 37, 58,	" " 1 k Ω	T1	AC Transformer
62, 63, 64, 65, 66,		T2	Antenna Trans.
67, 68, 72, 77, 81,		T3	HF Trans.
88, 95		T4, 5	1st Intermediate Freq. Trans.
R10, 71, 87, 91	" " 3.3 k Ω	T6	2nd " " "
R11, 14, 23, 76,	" " 6.8 k Ω	T7	" " " "
84, 85		T8	" " " "
R12, 25, 28, 32,	" " 470 Ω	T9	Osc. Trans. (2)
34, 40, 42, 54,		T10, 11	" " (1)
59, 60, 69		T12, 13	Trap Coil
R13, 43, 70	" " 22 k Ω	T14	TX. Input Trans.
R15	" " 220 Ω	T15	TX. Drive Trans.
R16, 35, 61, 82	" " 100 Ω	T16	TX. Tank Coil
R17, 19, 38	" " 1 k Ω	T17	Input Transformer
R18, 20	" " 47 k Ω	T18	Output Transformer
R21, 22, 49	" " 1 M Ω	X1	X'tal HC-18/U 36.790 MHz
R24, 26, 52	" " 2.2 k Ω	X2	" " 36.840 MHz
R30, 39, 51, 83	" " 10 k Ω	X3	" " 36.890 MHz
R31, 41, 46, 57	" " 100 k Ω	X4	" " 10.240 MHz
R33	" " 220 k Ω	X5	" " 10.230 MHz
R44	" " 150 k Ω	X6	" " 10.220 MHz
R45, 48, 97	" " 68 k Ω	X7	" " 10.210 MHz
R47, 56	" " 56 k Ω	X8	" " 9.785 MHz
R53	" " 560 Ω	X9	" " 9.775 MHz
R55	" " 2.7 k Ω	X10	" " 9.765 MHz
R73	" " 39 k Ω	X11	" " 9.755 MHz
R74	" " 3.9 k Ω		
R75	" " 15 Ω		
R78, 93	" " 47 Ω		
R79	" " 10 Ω		
R80	" " 33 Ω		
R89, 96	" " 330 Ω		
R90	" " 15 k Ω		
R92	" " 270 Ω		
R94	" " 0.3 Ω		