



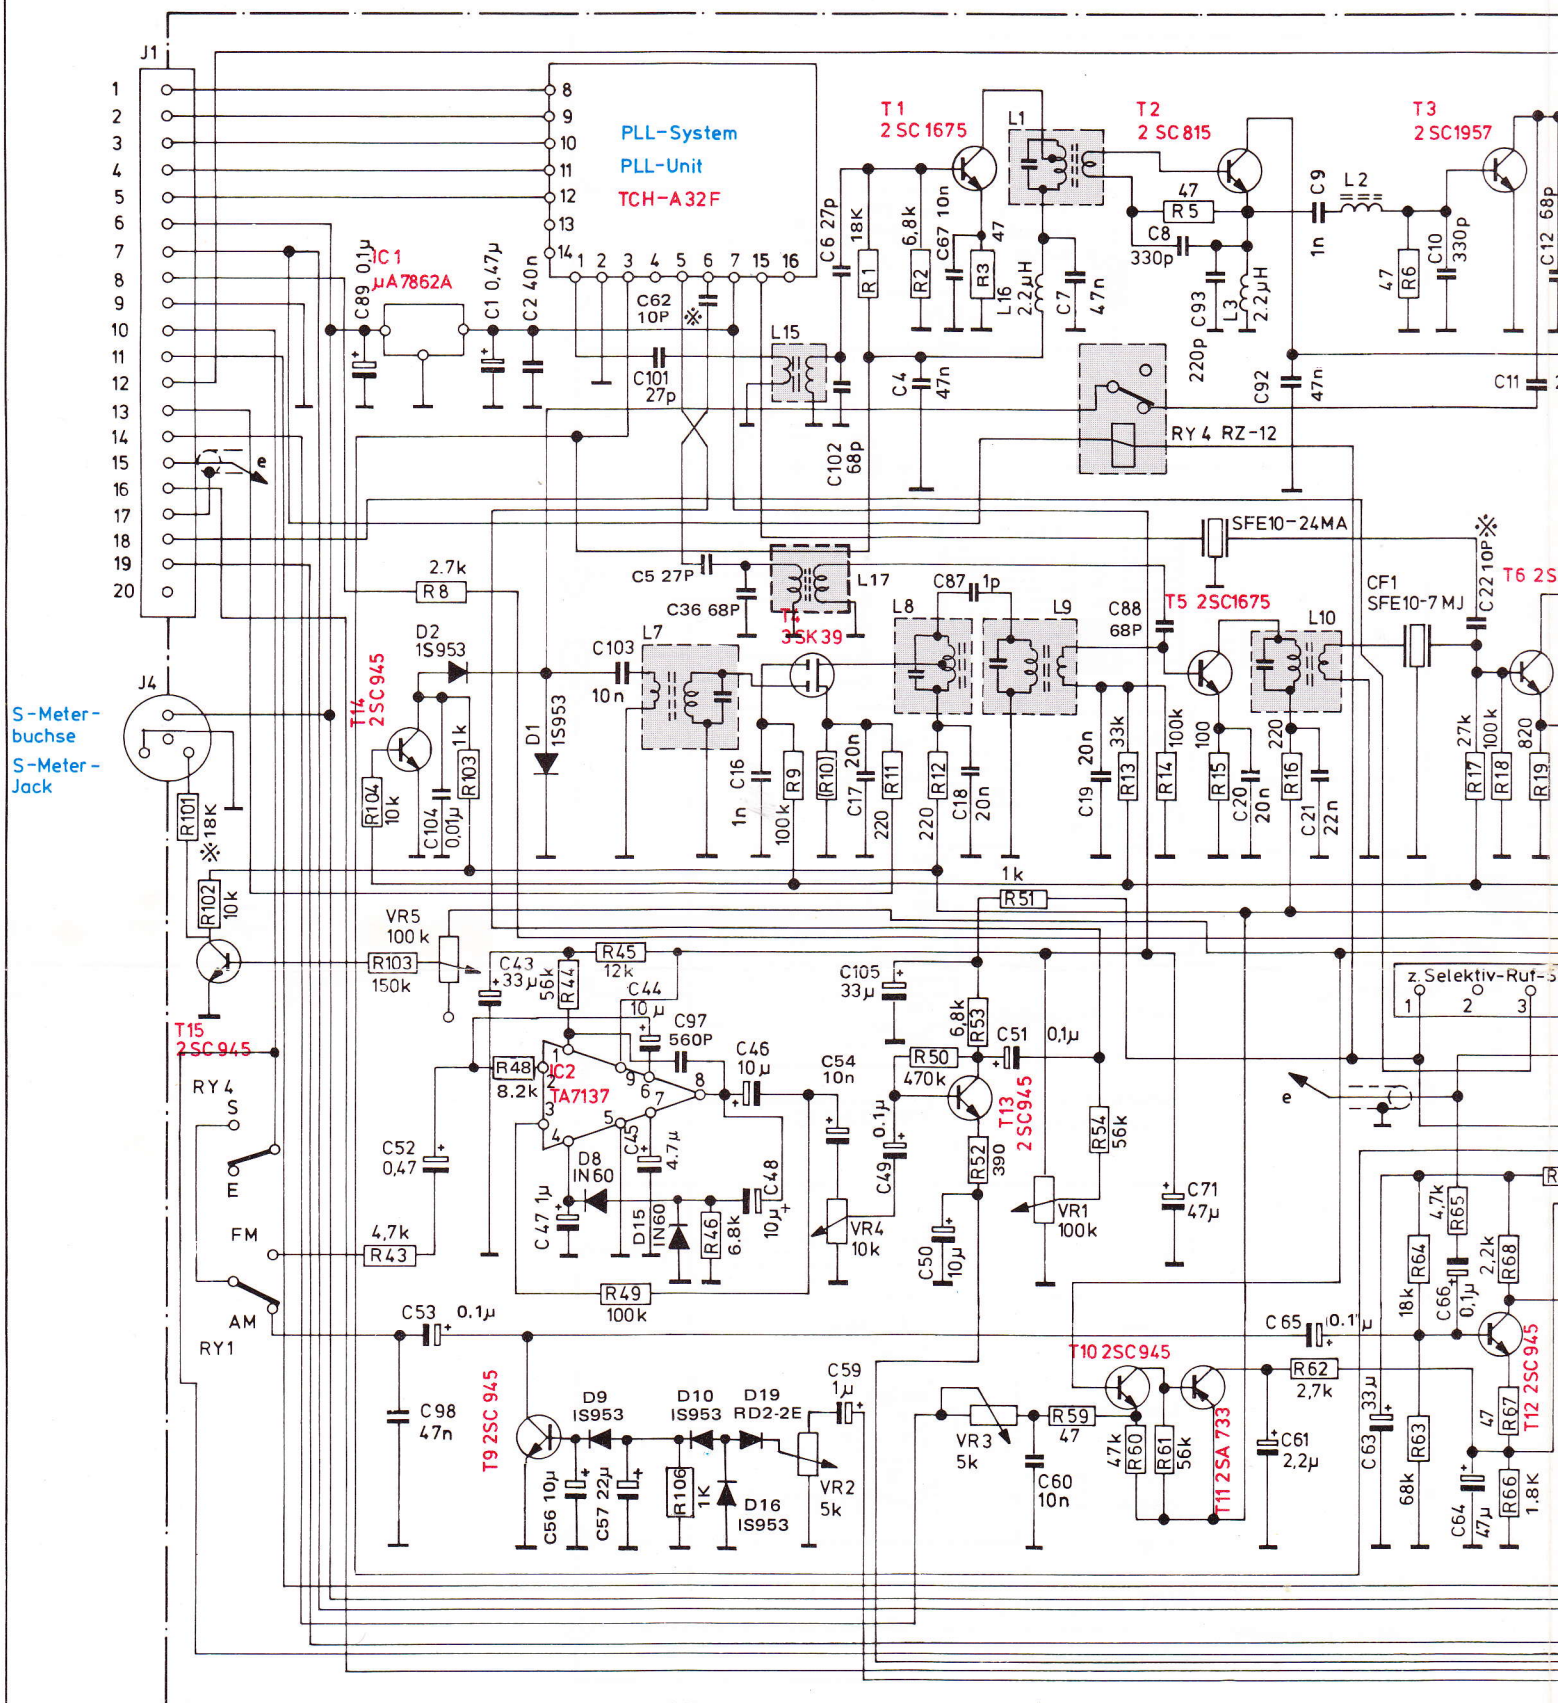

C	89, 104, 1, 2, 56, 103, 101, 62, 5, 16, 36, 6, 102, 17, 4, 18, 87, 67, 7, 19, 8, 88, 93, 20, 92, 9, 21, 10, 22, 11, 98, 52, 53, 43, 47, 57, 55, 56, 44, 45, 97, 46, 48, 59, 54, 49, 105, 50, 51, 60, 71, 61, 65, 63, 64, 66,
R	101, 102, 104, 8, 103, 48, 106, 9, 10, 11, 2, 12, 3, 13, 14, 5, 15, 16, 6, 17, 18, 19, 43, 103, 5, 44, 45, 49, 46, 2, 4, 50, 3, 52, 53, 51, 1, 59, 54, 60, 61, 62, 63, 64, 65, 66, 67, 68, 6,

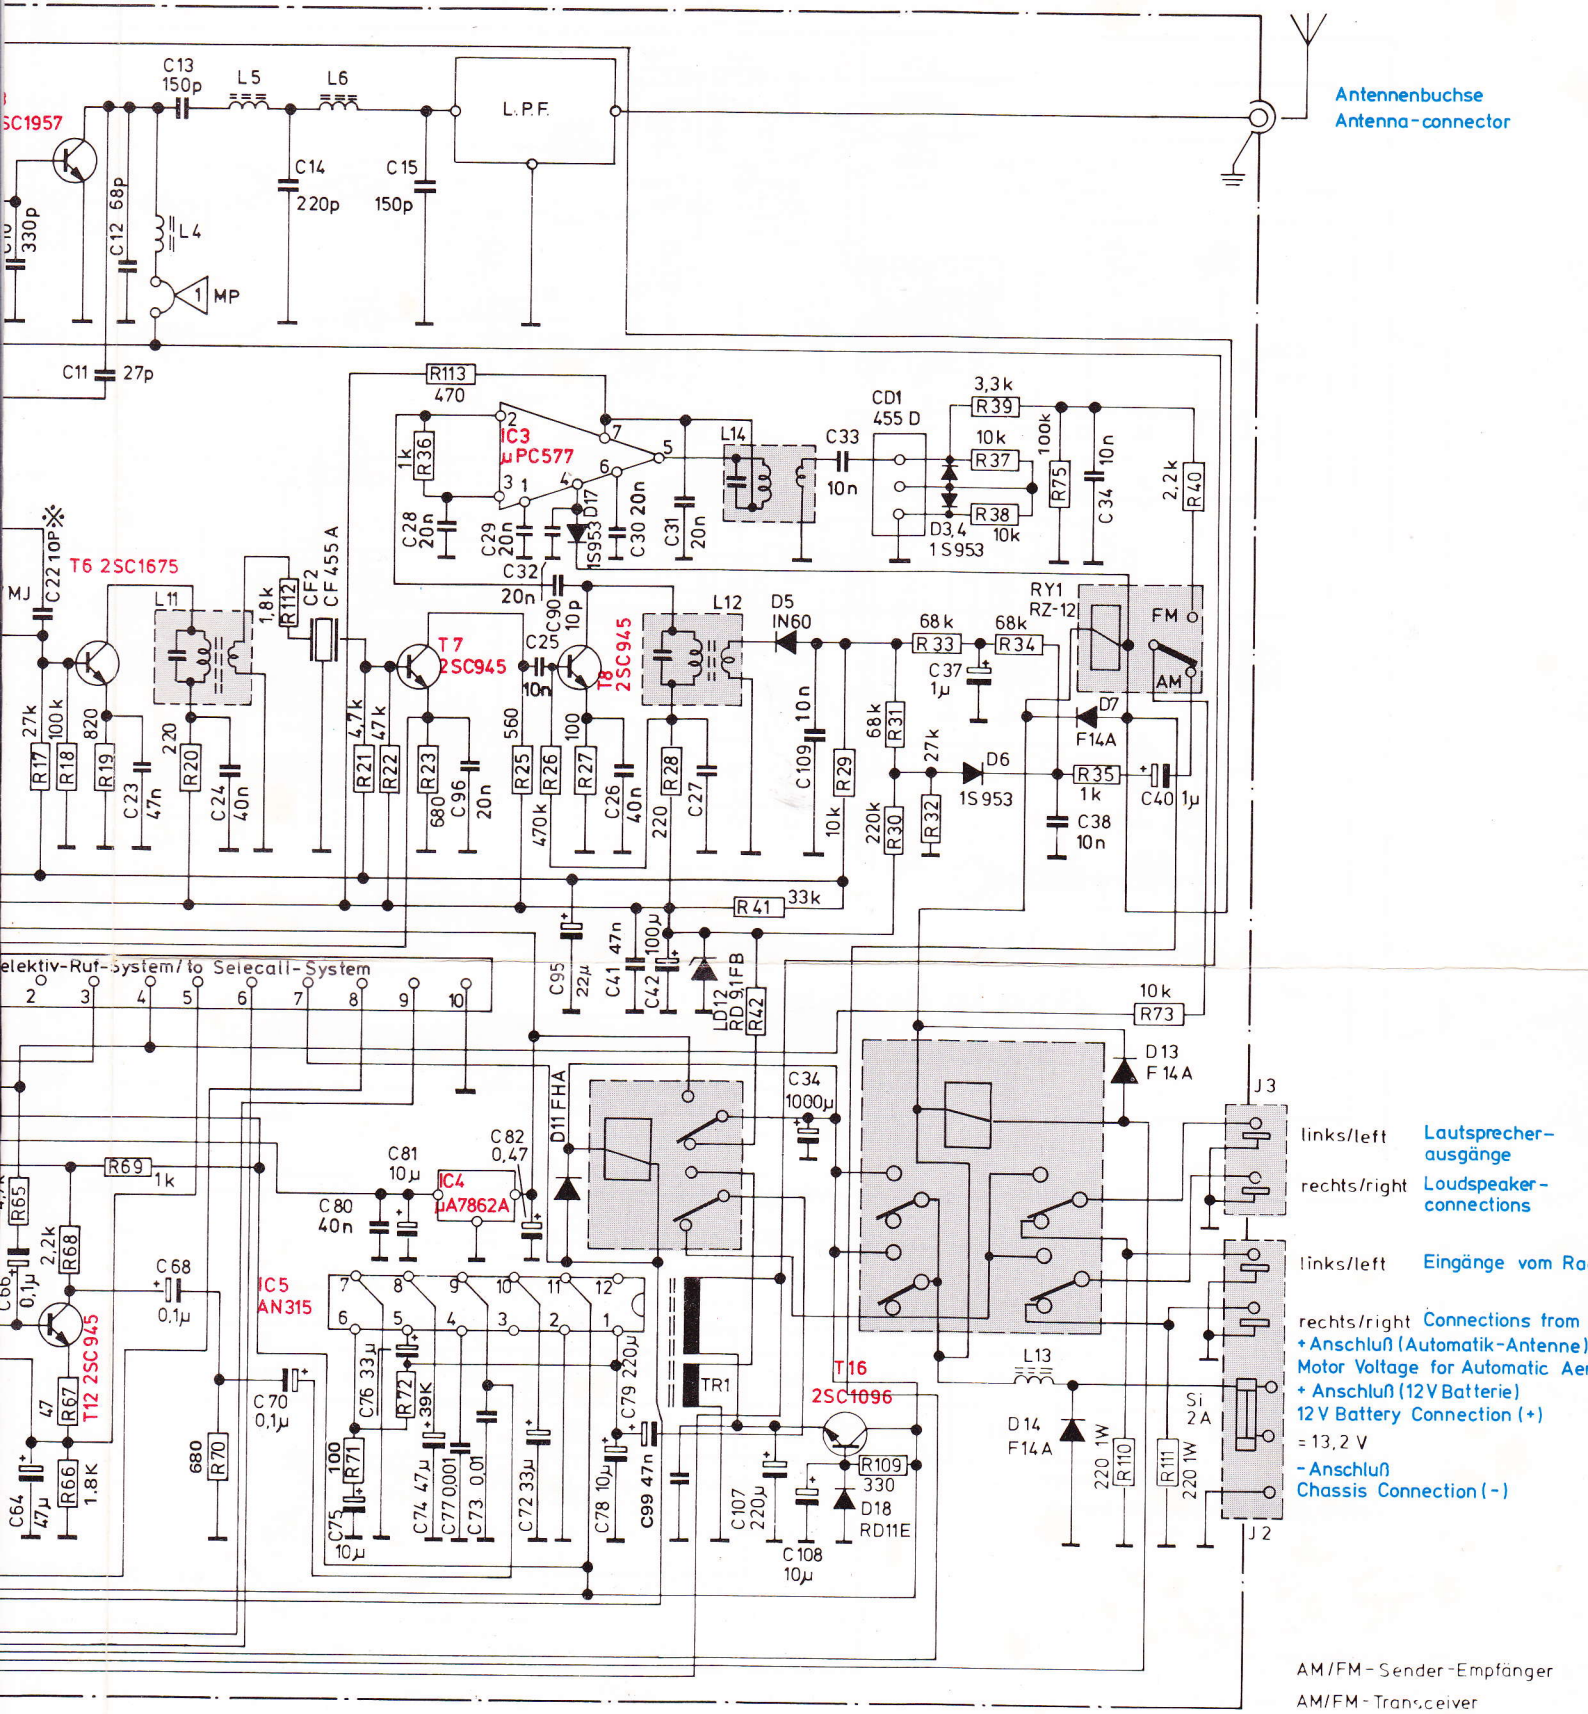


Schaltbild
CIRCUIT DIAGRAM

GRUNDIG

CB/AS 200

(E58007)

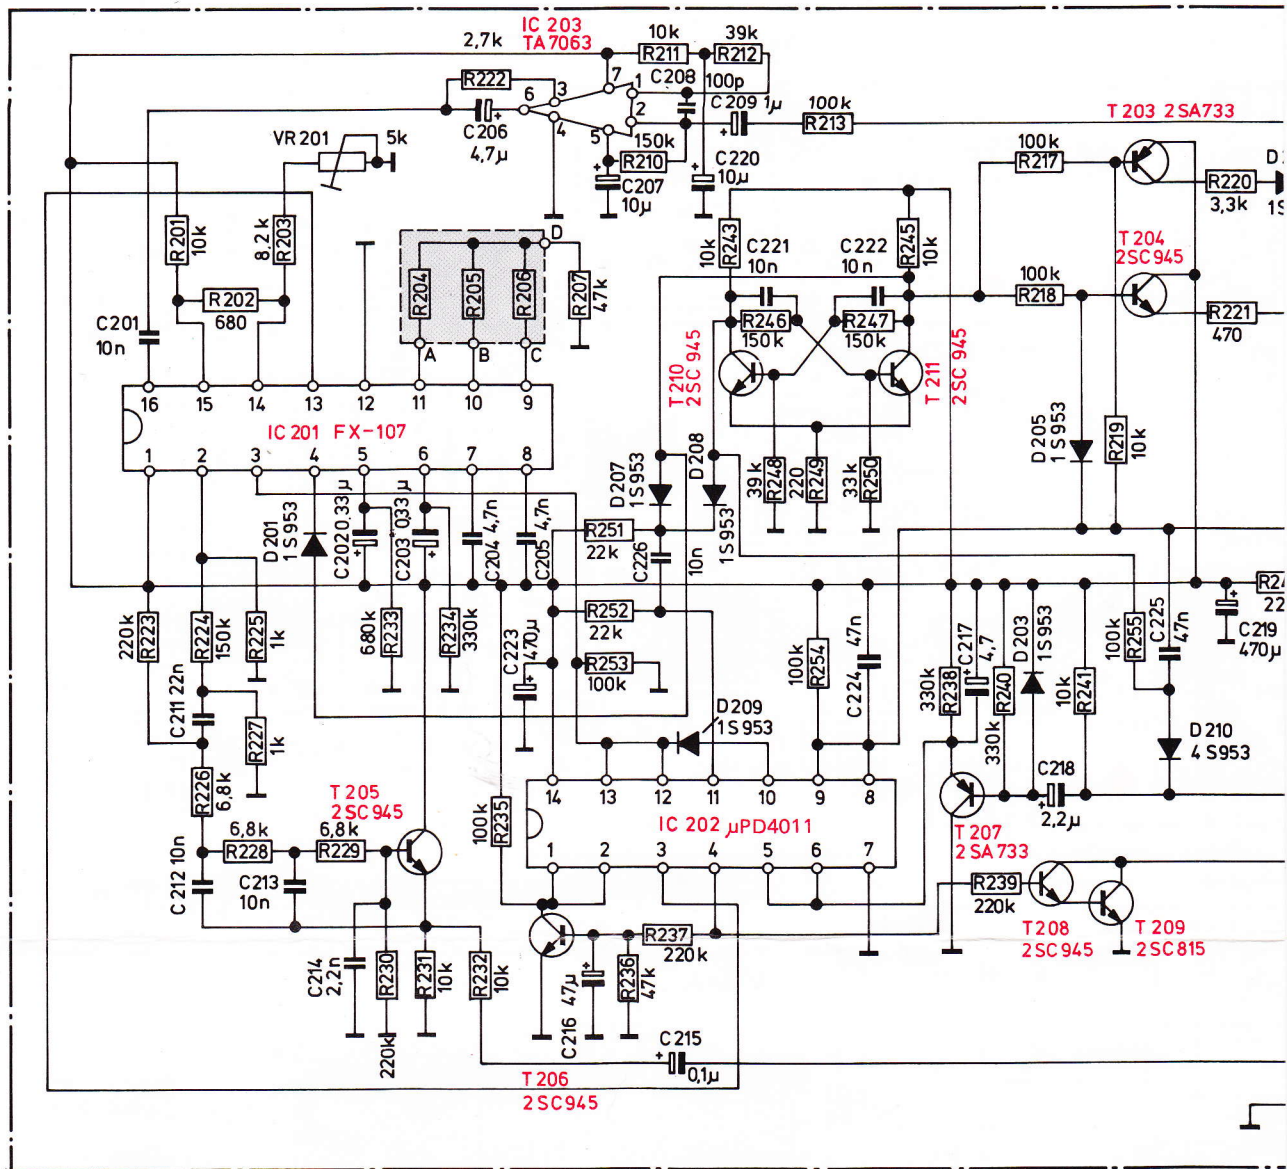


	1	2	3	4	5	6	7	8	9	10
Frequ. (Hz)	1057,5	1163	1269	1402	1530	1665,5	1828	2001	2203	2403
R 204										
R 205(kΩ)	102	88,7	77,7	65,7	56,2	48,1	39,7	32,4	23,7	18,7
R 206										

Codierung des Selektivruf-Systems
Coding of the Selectiv-Call-System

Änderungen vorbehalten
ALTERATIONS RESERVED

3-Ton-Selektivruf-System
3-Tone-Selecall-Unit

C	201,	202,	203, 204, 206, 205,	207, 226, 208, 220, 221, 209,	222,					
R	201,	202, 203,	204, 205, 222, 206, 207, 251, 210, 211, 212, 243, 246, 248, 249, 213, 247, 250, 245, 217, 218, 219,	223, 224, 226, 225, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 252, 253, 237,	254,	224,	217,	218,	225, 219,	220, 221,

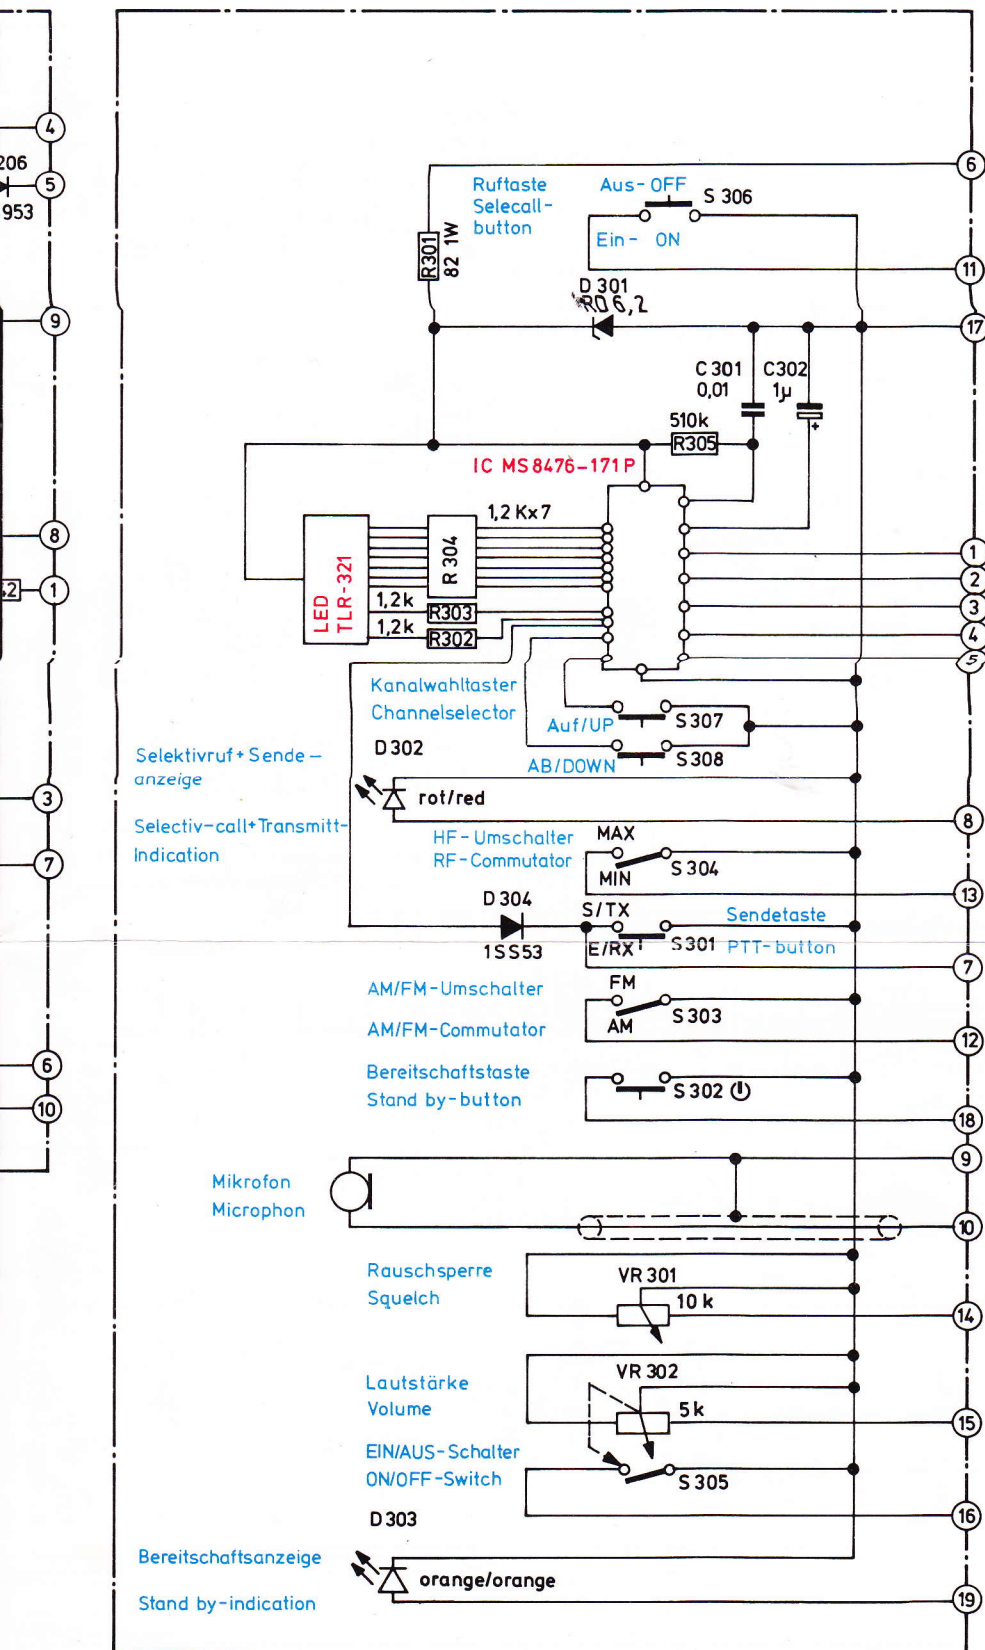

Fernbedienteil
Keyboard Command Module

C	301, 302,	
R	301, 302, 303,	305,