

M795 POWER Option Jumper Detail


OTP 1	OTP 2	OTP 3	Detail	Country frequency													
				I0	I2	DE	D2	EU	CE	SP	FR	UK	PL	RU	PO	PC	SW
0	0	0	Selectable only European band by keypad	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	✗	✗
0	0	1	Selectable European and international band by keypad	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
0	1	1	Band Lock Option	Single country frequency select follows last setting.													
0	1	0	Only Russia 400-CH (RU)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	✗
1	0	0	Only Poland 400-CH (PO)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	✗
1	0	1	Only Private Channels (PC)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	✓	✗
1	1	1	Only Sweden 24 CH (SW)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	✗	✓

*1 Remark: Sweden band won't be work in M795 POWER

*2 Remark: "0" = short circuit "1" = open circuit


*3 Remark: ✓ = enable ✗ = disable

Option for Country frequency.

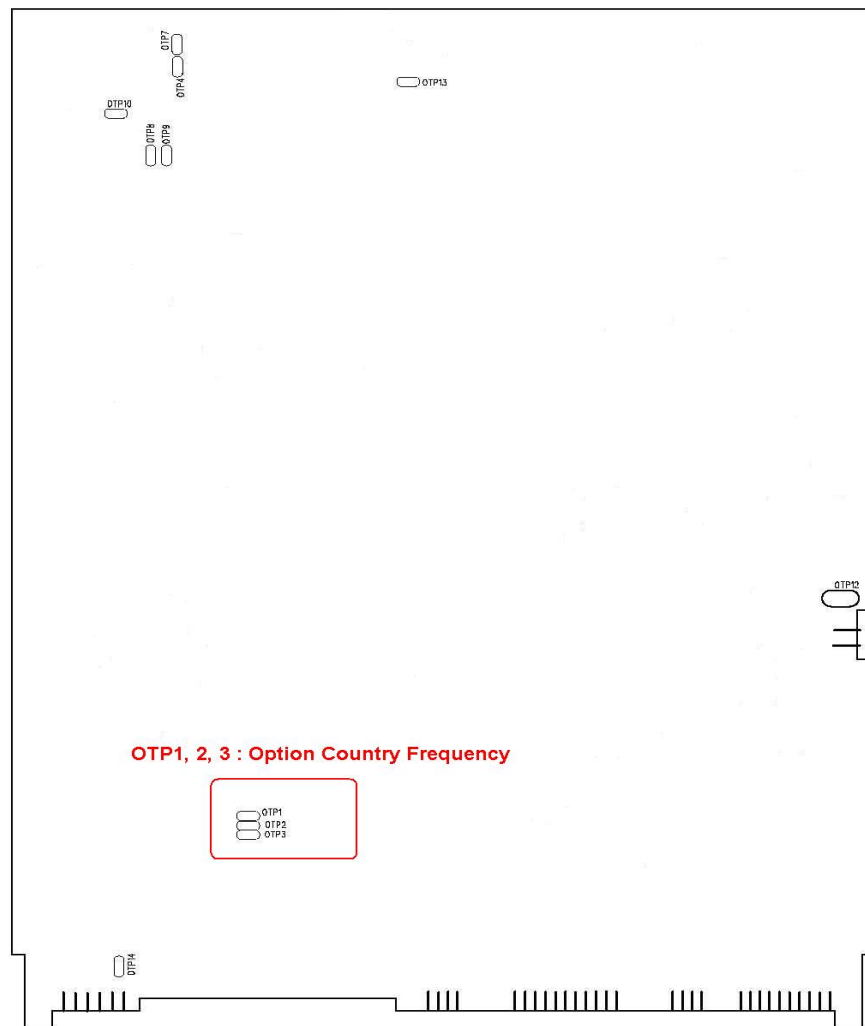


M-795 411418B
BOTTOM SCREEN

Option for 4 Watt.

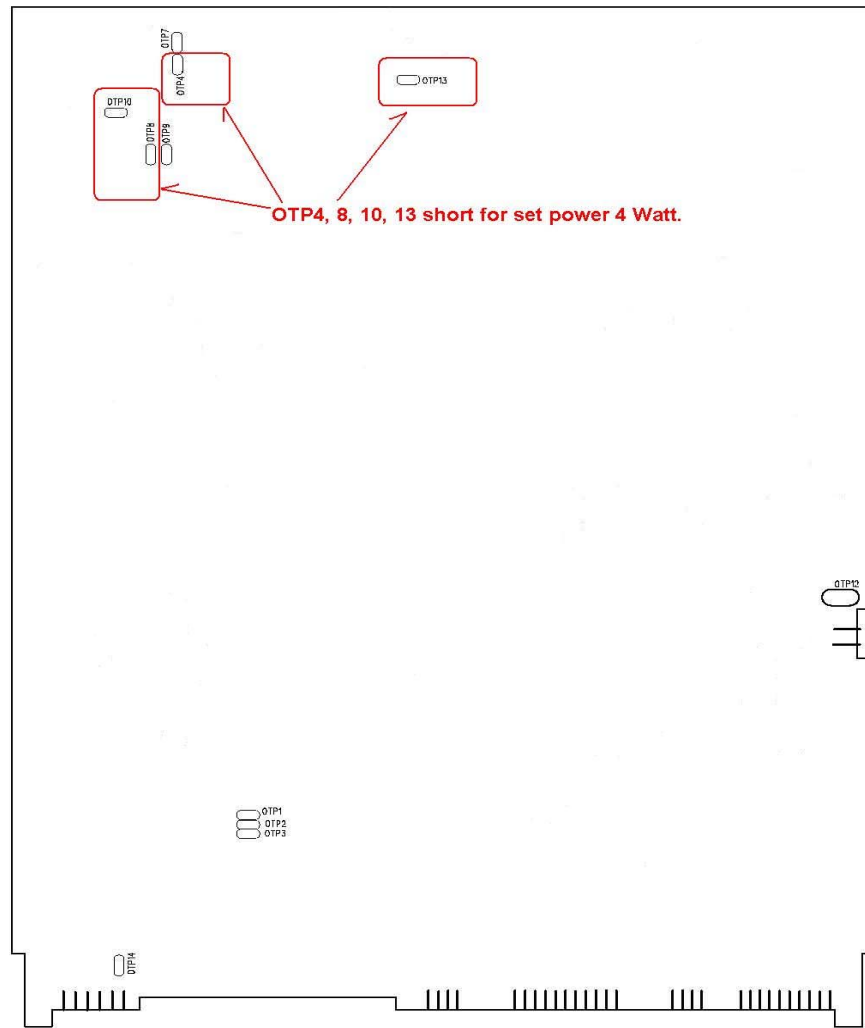

M-795 411418B
BOTTOM SCREEN

Option for 15 Watt.

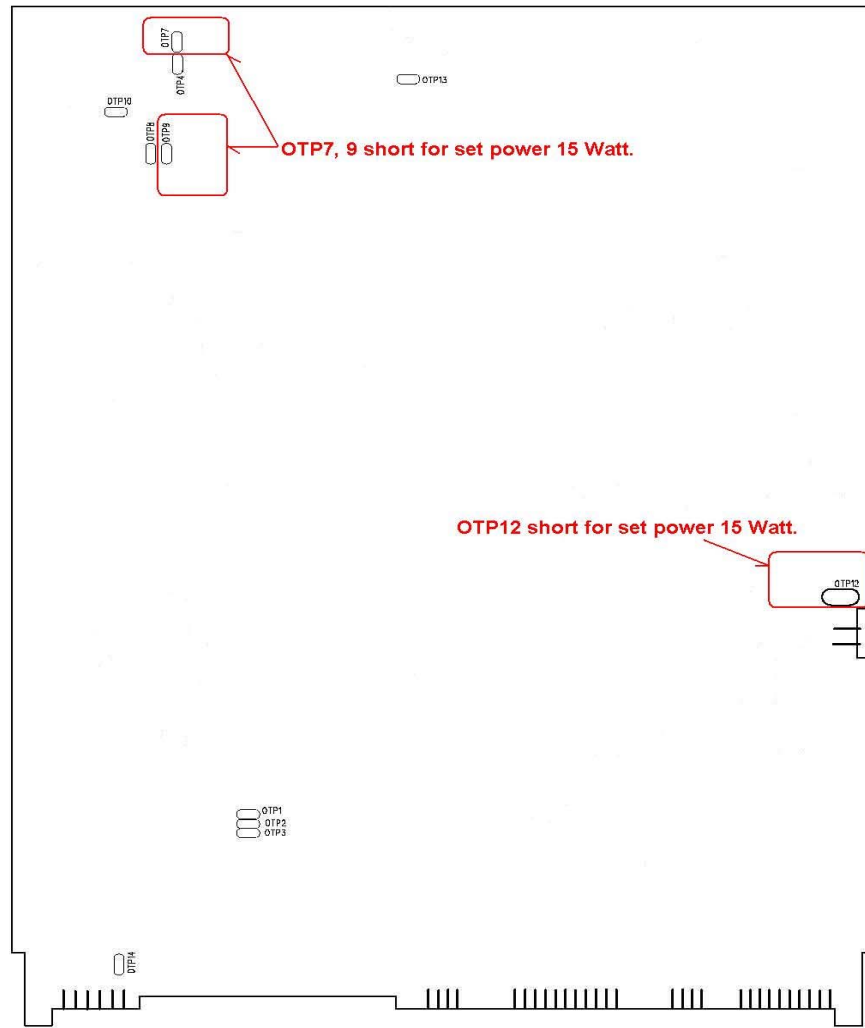

M-795 411418B
BOTTOM SCREEN