



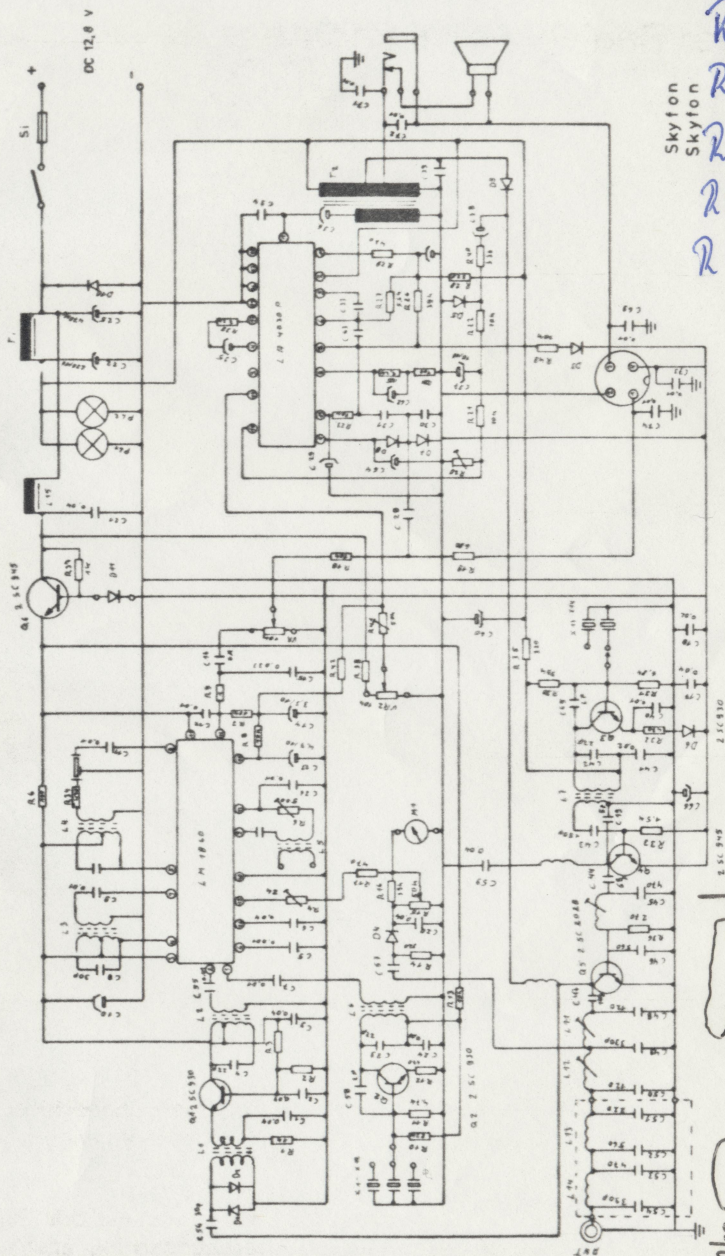

R4 = SM-Ampfang
 R5 = Ampl-Ltdörke
 R15 = SM-Sende
 R20 = Modem
 R41 =

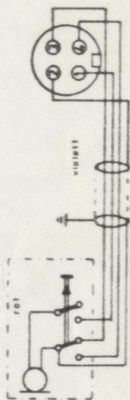

ST-12 Super
 0 1m-Sende
 0 1m-Ampf
 0 1m-Sende
 0 1m-Ampf
 0 1m-Sende
 0 1m-Ampf

Reli am Netzkil = Mod-Lista

stabo

mobil Sykfon 400

Schaltbild

