



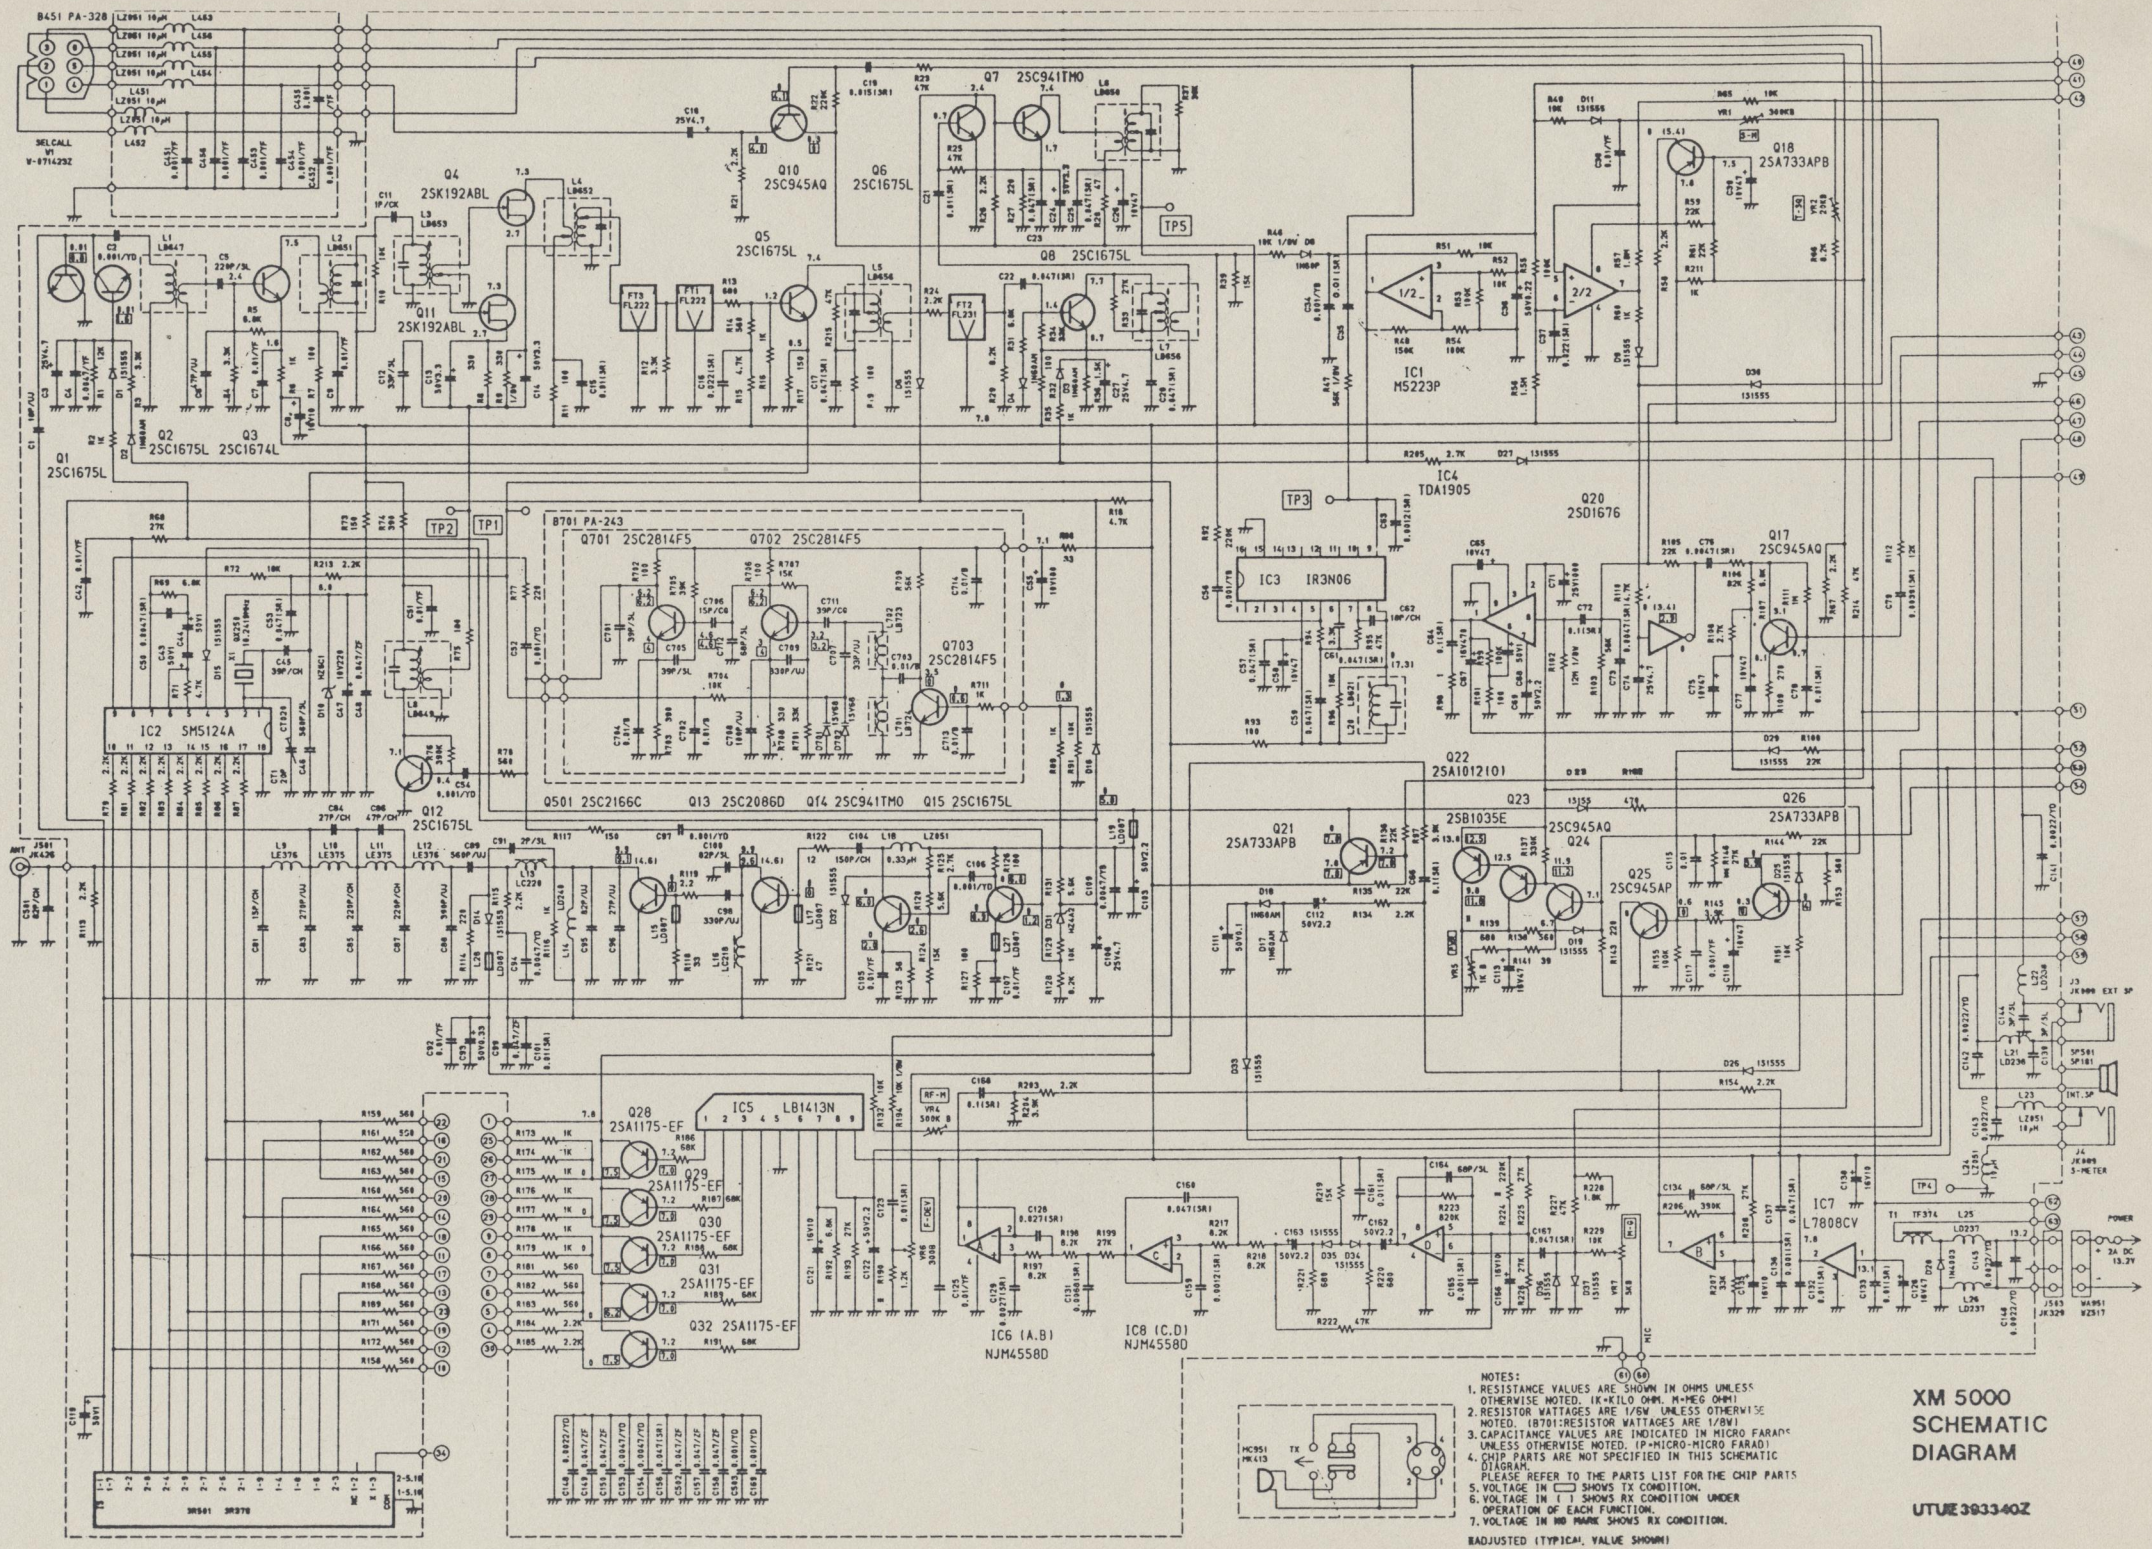

**XM 5000
SCHEMATIC
DIAGRAM**

UTURE 393340Z

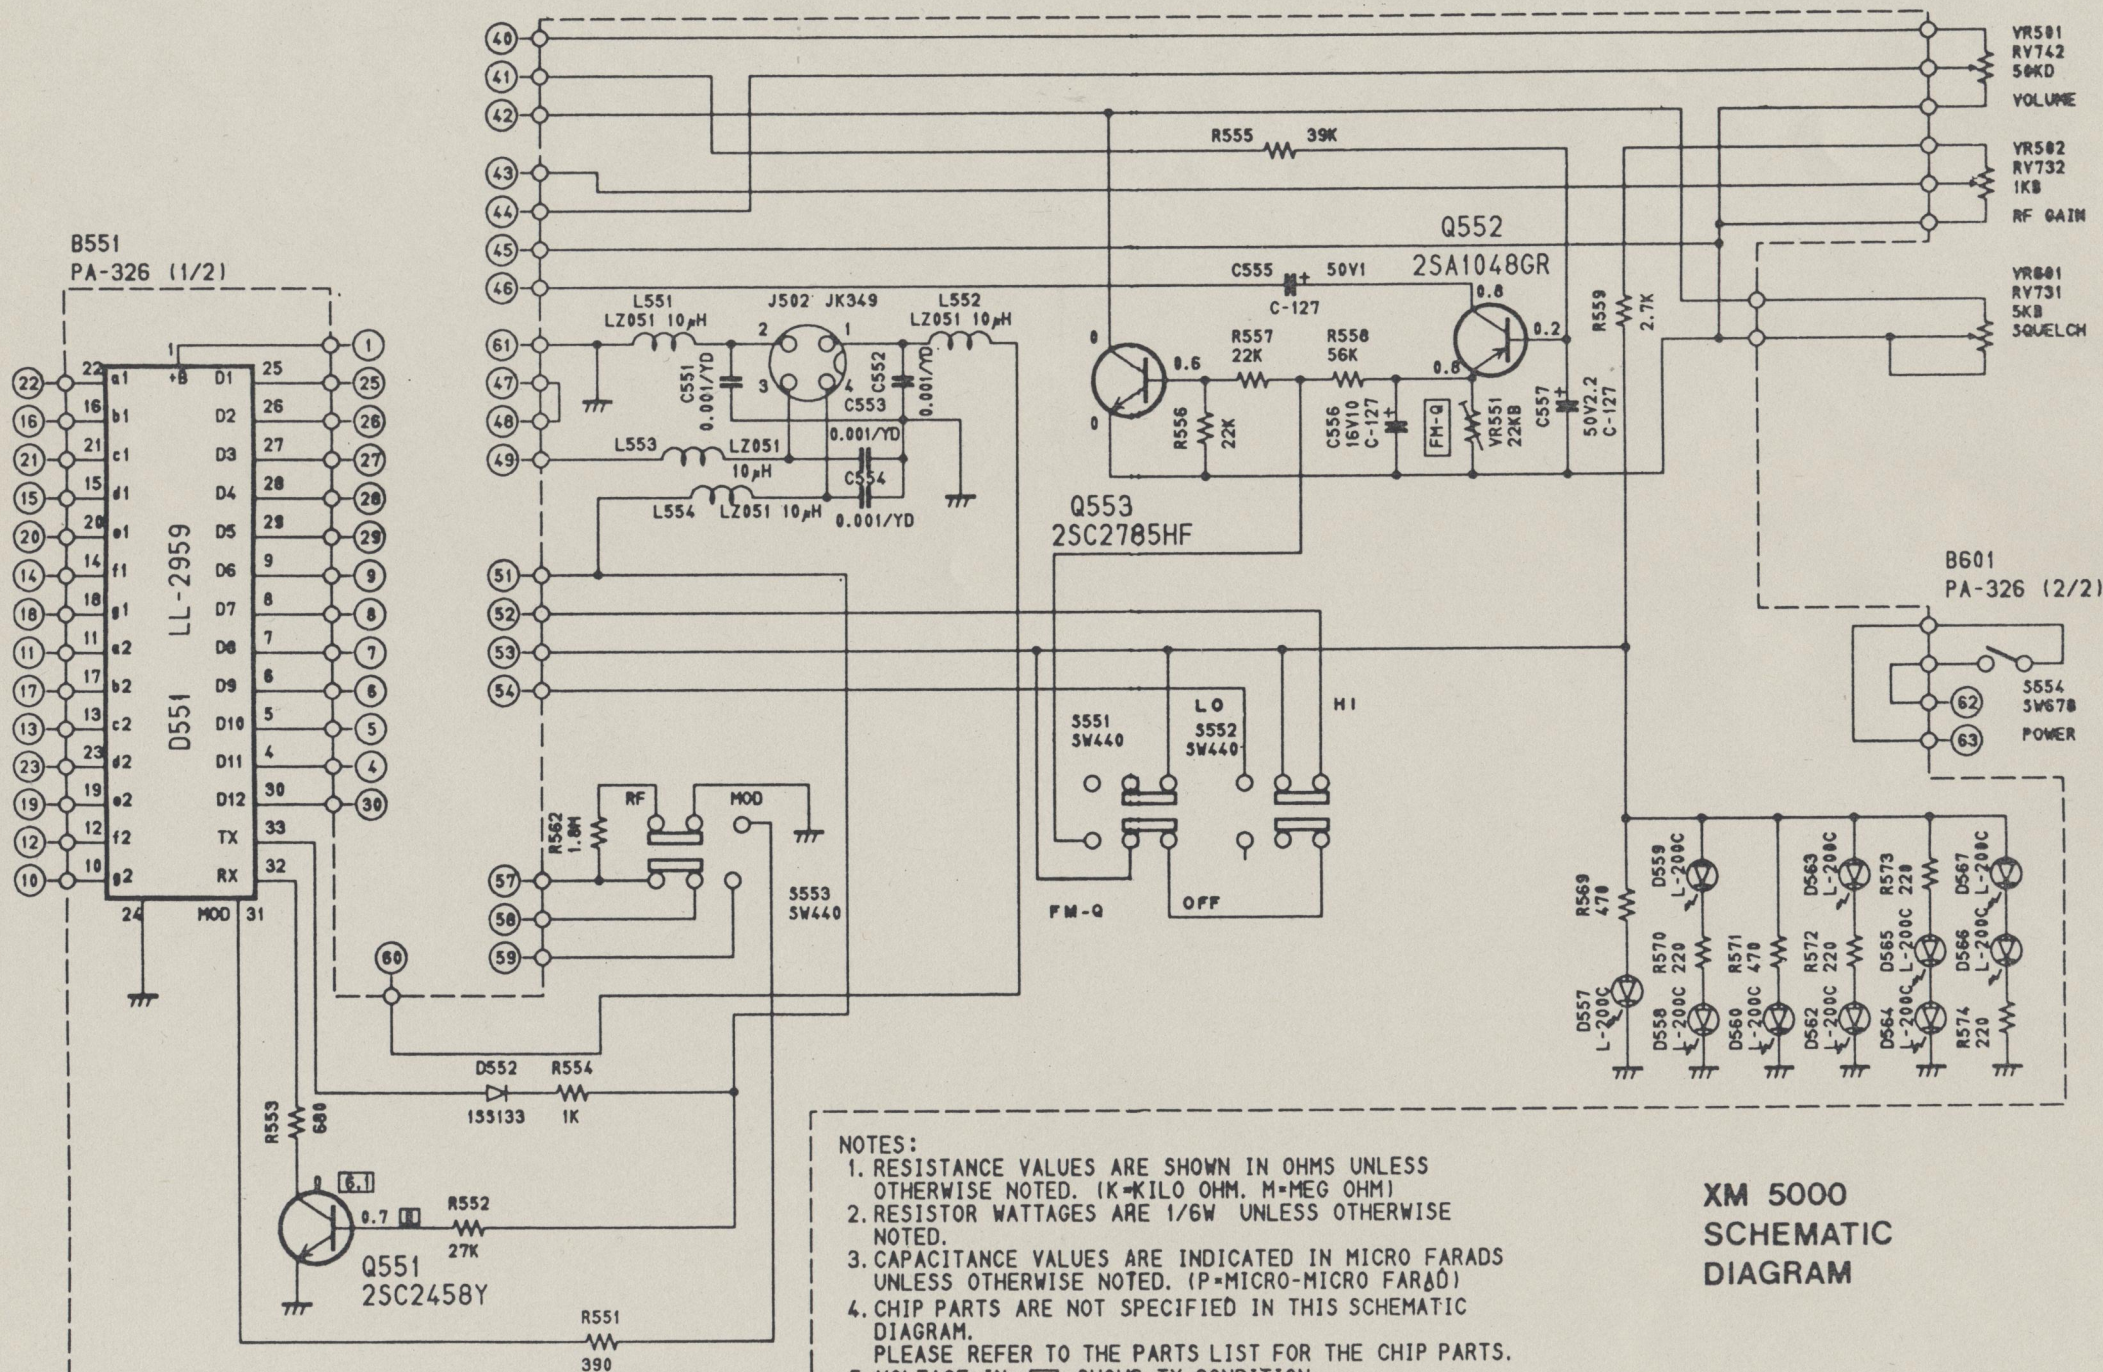

NOTES:

1. RESISTANCE VALUES ARE SHOWN IN OHMS UNLESS OTHERWISE NOTED. (K=KILO OHM, M=MEG OHM)
2. RESISTOR WATTAGES ARE 1/6W UNLESS OTHERWISE NOTED.
3. CAPACITANCE VALUES ARE INDICATED IN MICRO FARADS UNLESS OTHERWISE NOTED. (P=MICRO-MICRO FARAD)
4. CHIP PARTS ARE NOT SPECIFIED IN THIS SCHEMATIC DIAGRAM. PLEASE REFER TO THE PARTS LIST FOR THE CHIP PARTS.
5. VOLTAGE IN $\square$ SHOWS TX CONDITION.
6. VOLTAGE IN () SHOWS RX CONDITION UNDER OPERATION OF EACH FUNCTION.
7. VOLTAGE IN NO MARK SHOWS RX CONDITION.

XM 5000 SCHEMATIC DIAGRAM