



Q 901 2SC1944C
Q 902 Push Pull
Q 903 Final
Q 902 Transistors

R49
*Remove the Trimmer
and solder R49 (1 ohm)*

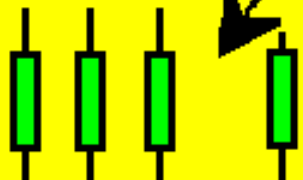

16.810 MHz

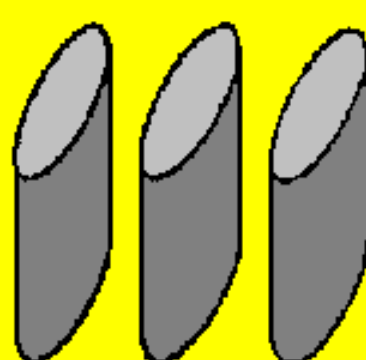

14.910 MHz

*Remove the solder (straps) X4 X3 X2
between X2, X3 and X4*
Add X-2 & X-4