



USE Pb FREE SOLDER

B1 PA-499AA (TOP VIEW)


*4 Q202 ASSEMBLY
BEFORE DIP.

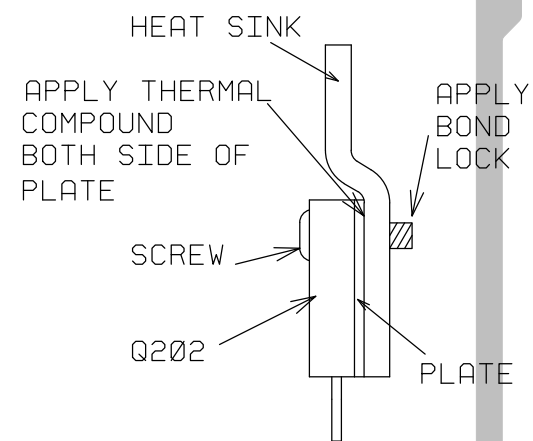



*1 T401 AND T402

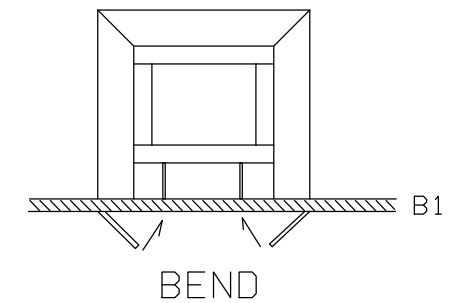

*2 L201, L202, L203, L204,
L205 AND L208
MUST BE FLAT MOUNT

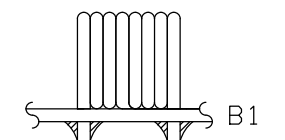

*3

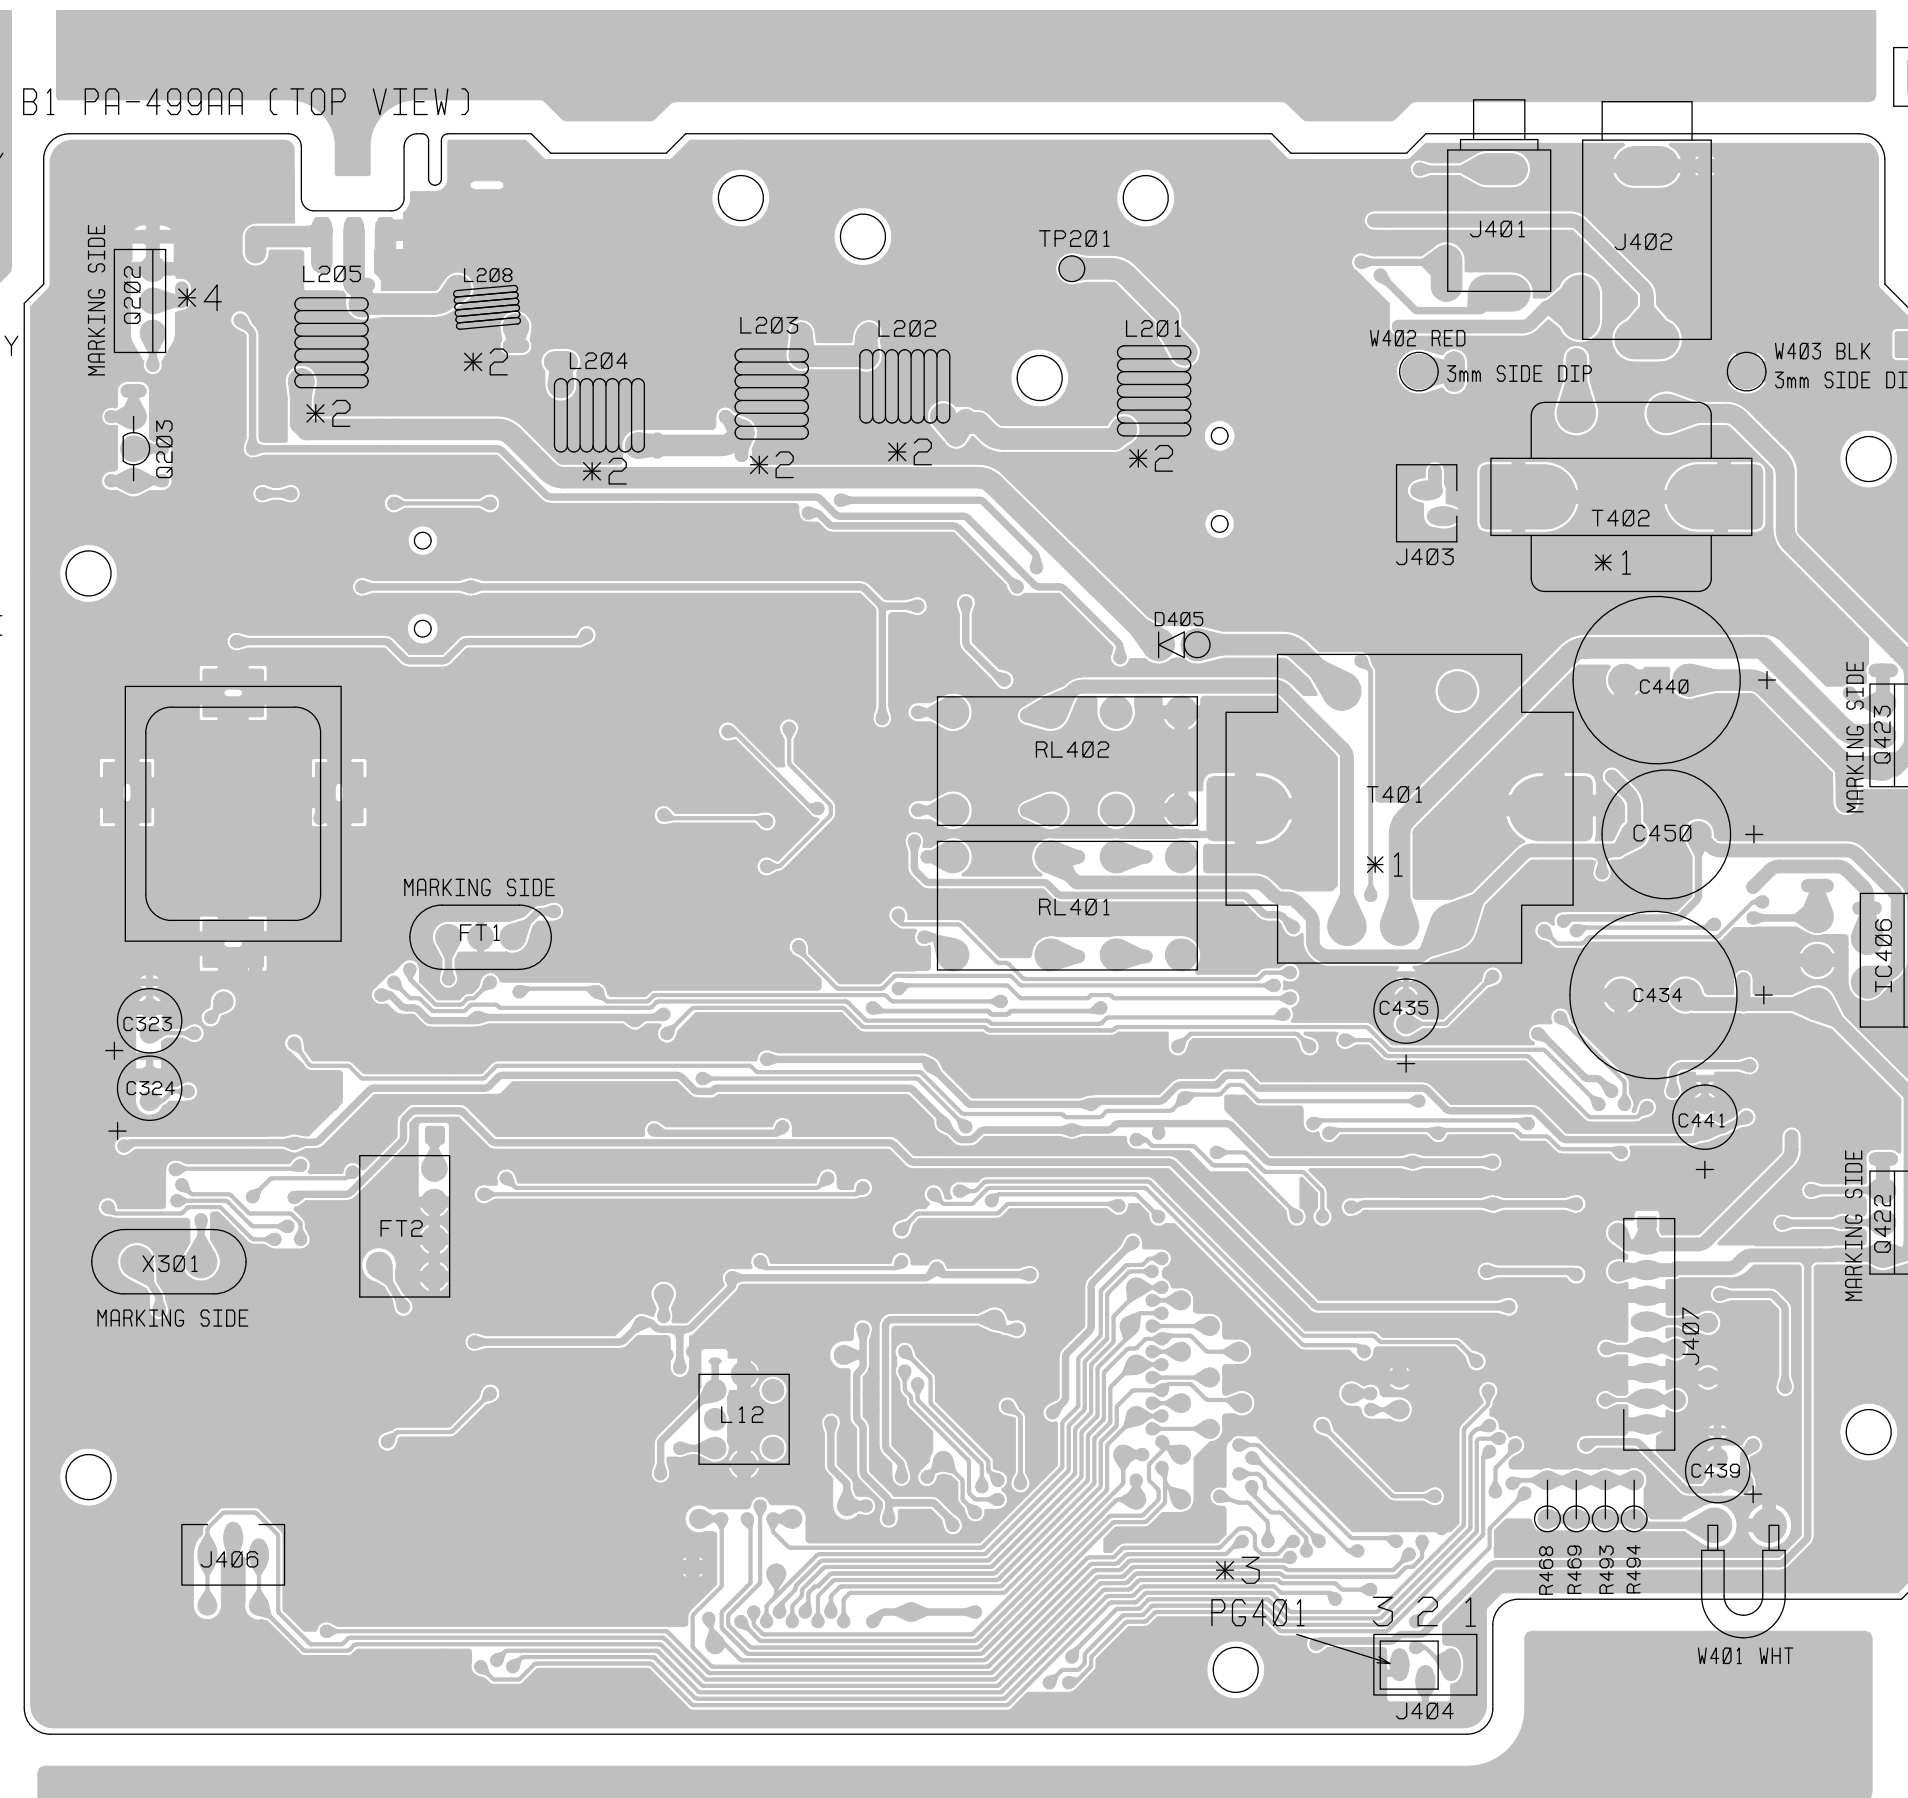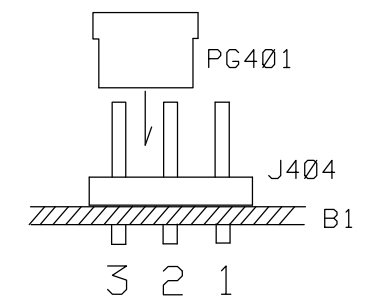

DESIGN. BY	DRAWN. BY	UNIDEN NO.	MODEL NO.
2014.09.09	2014.09.09	UT402ZV	xm4060e
MATSUMOTO	MATSUMOTO	TITLE MAIN PCB	
CHECK. BY	APPRO. BY	PARTS ASS'Y TOP VIEW 1/2	
2014.09.09	2014.09.09	DRAWING NO.	
SUZUKI	KUNIMITSU	E23-32778	
REV. NO.		UNIDEN CORP.	