
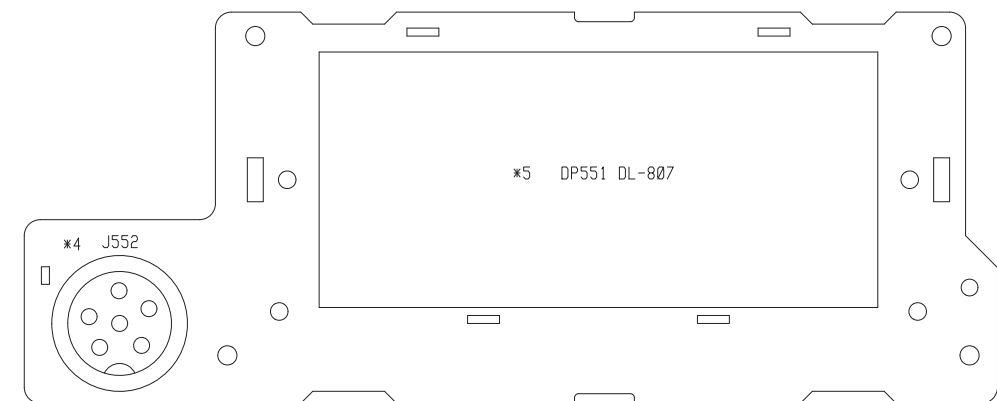





USE Pb FREE SOLDER

⊘ : SOLDERING


B1 PA-499 [BOTTOM VIEW]

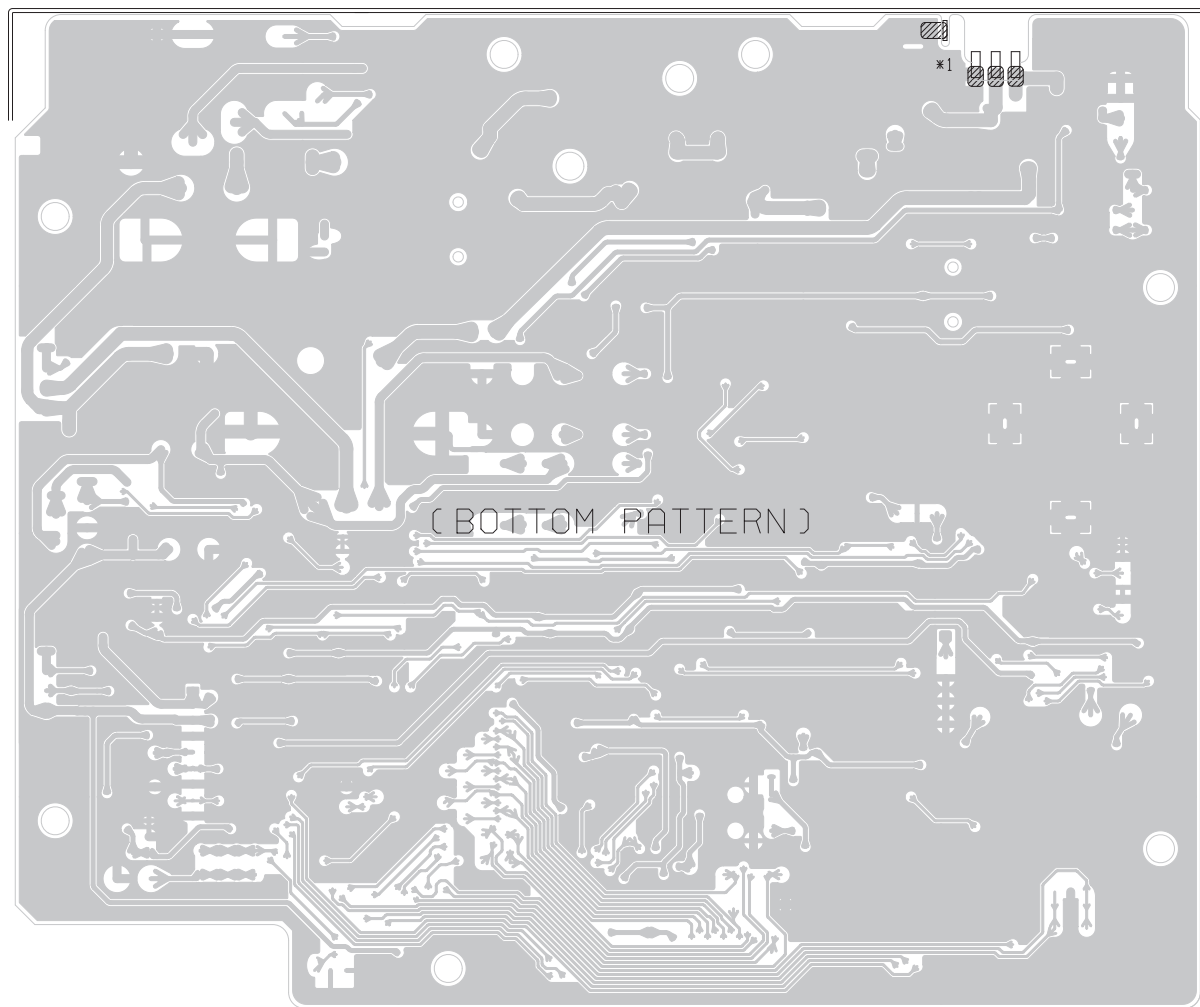

B551 PA-470 1/3 [TOP VIEW]

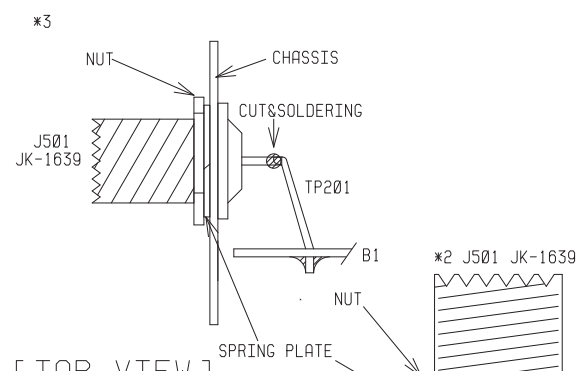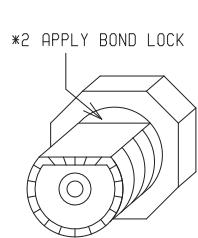
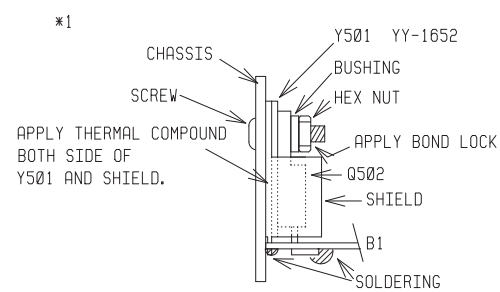


B1 PA-499 [TOP VIEW]


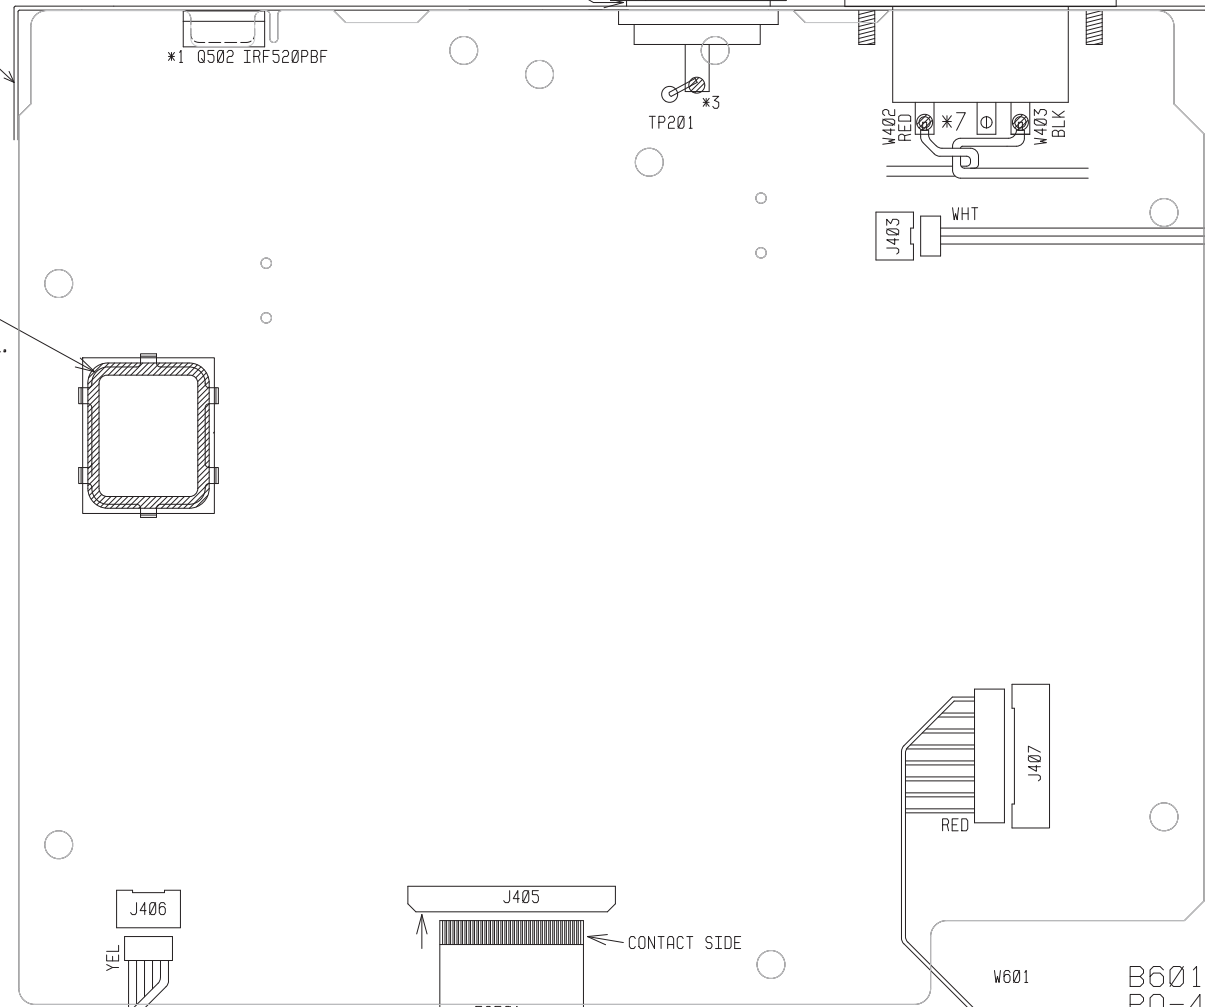


PUT ON SHIELD COVER
THEN SOLDER THE EDGE.
AFTER ALIGNMENT OF PLL.


B650 PA-470 2/3 [TOP VIEW]

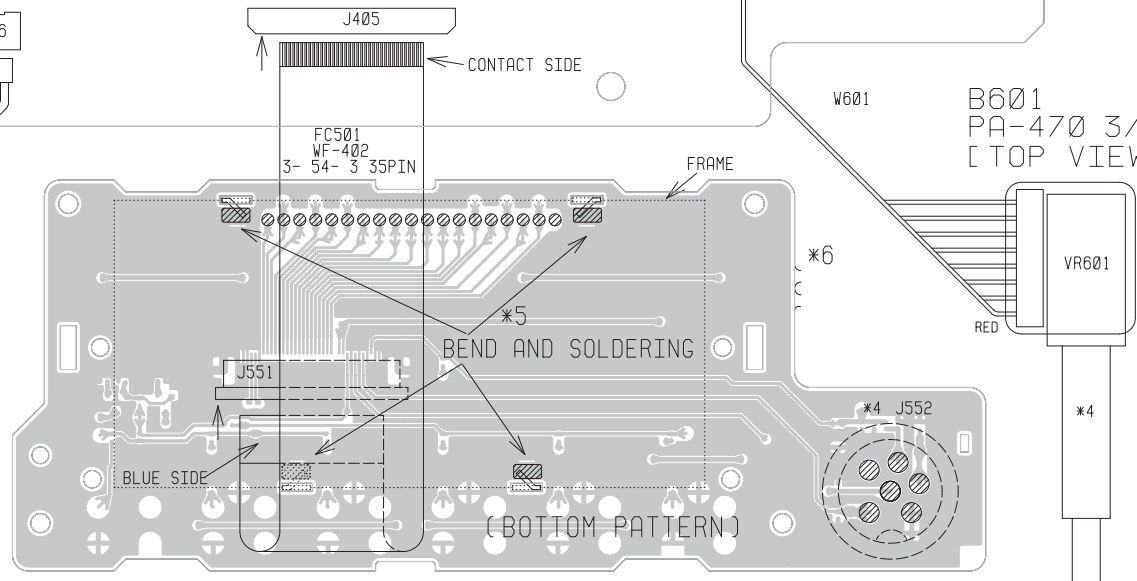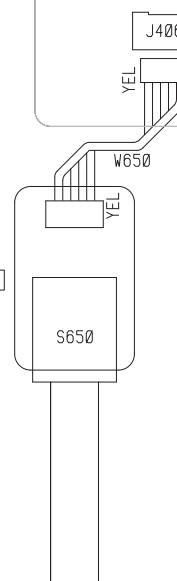

B551 PA-470 1/3 [BOTTOM VIEW]

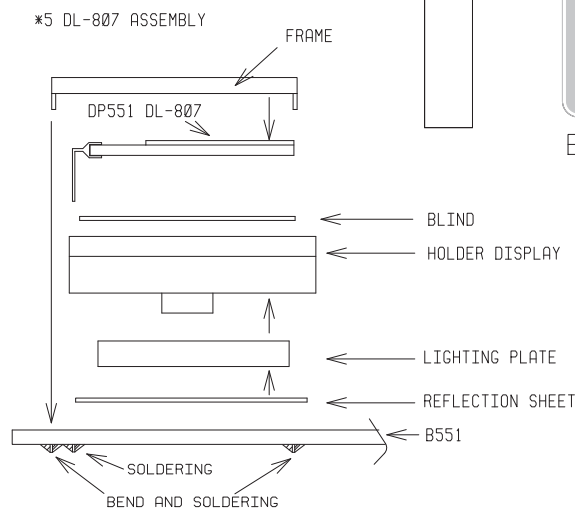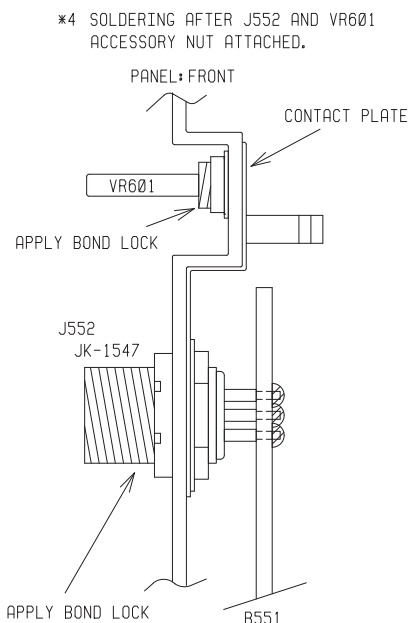

*6
CUT, IF MORE THAN 0.75mm.

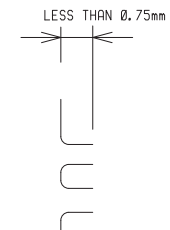

DESIGN. BY	DRAWN. BY	UNIDEN NO.	MODEL NO.
2014.09.09	2014.09.09	UT402ZV	xm4060e
MATSUMOTO	MATSUMOTO	TITLE	
CHECK. BY	APPRO. BY	WIRING DIAGRAM	
2014.09.09	2014.09.09	DRAWING NO.	
SUZUKI	KUNIMITSU	E33-6018	
REV. NO.	REV1		UNIDEN CORP.