


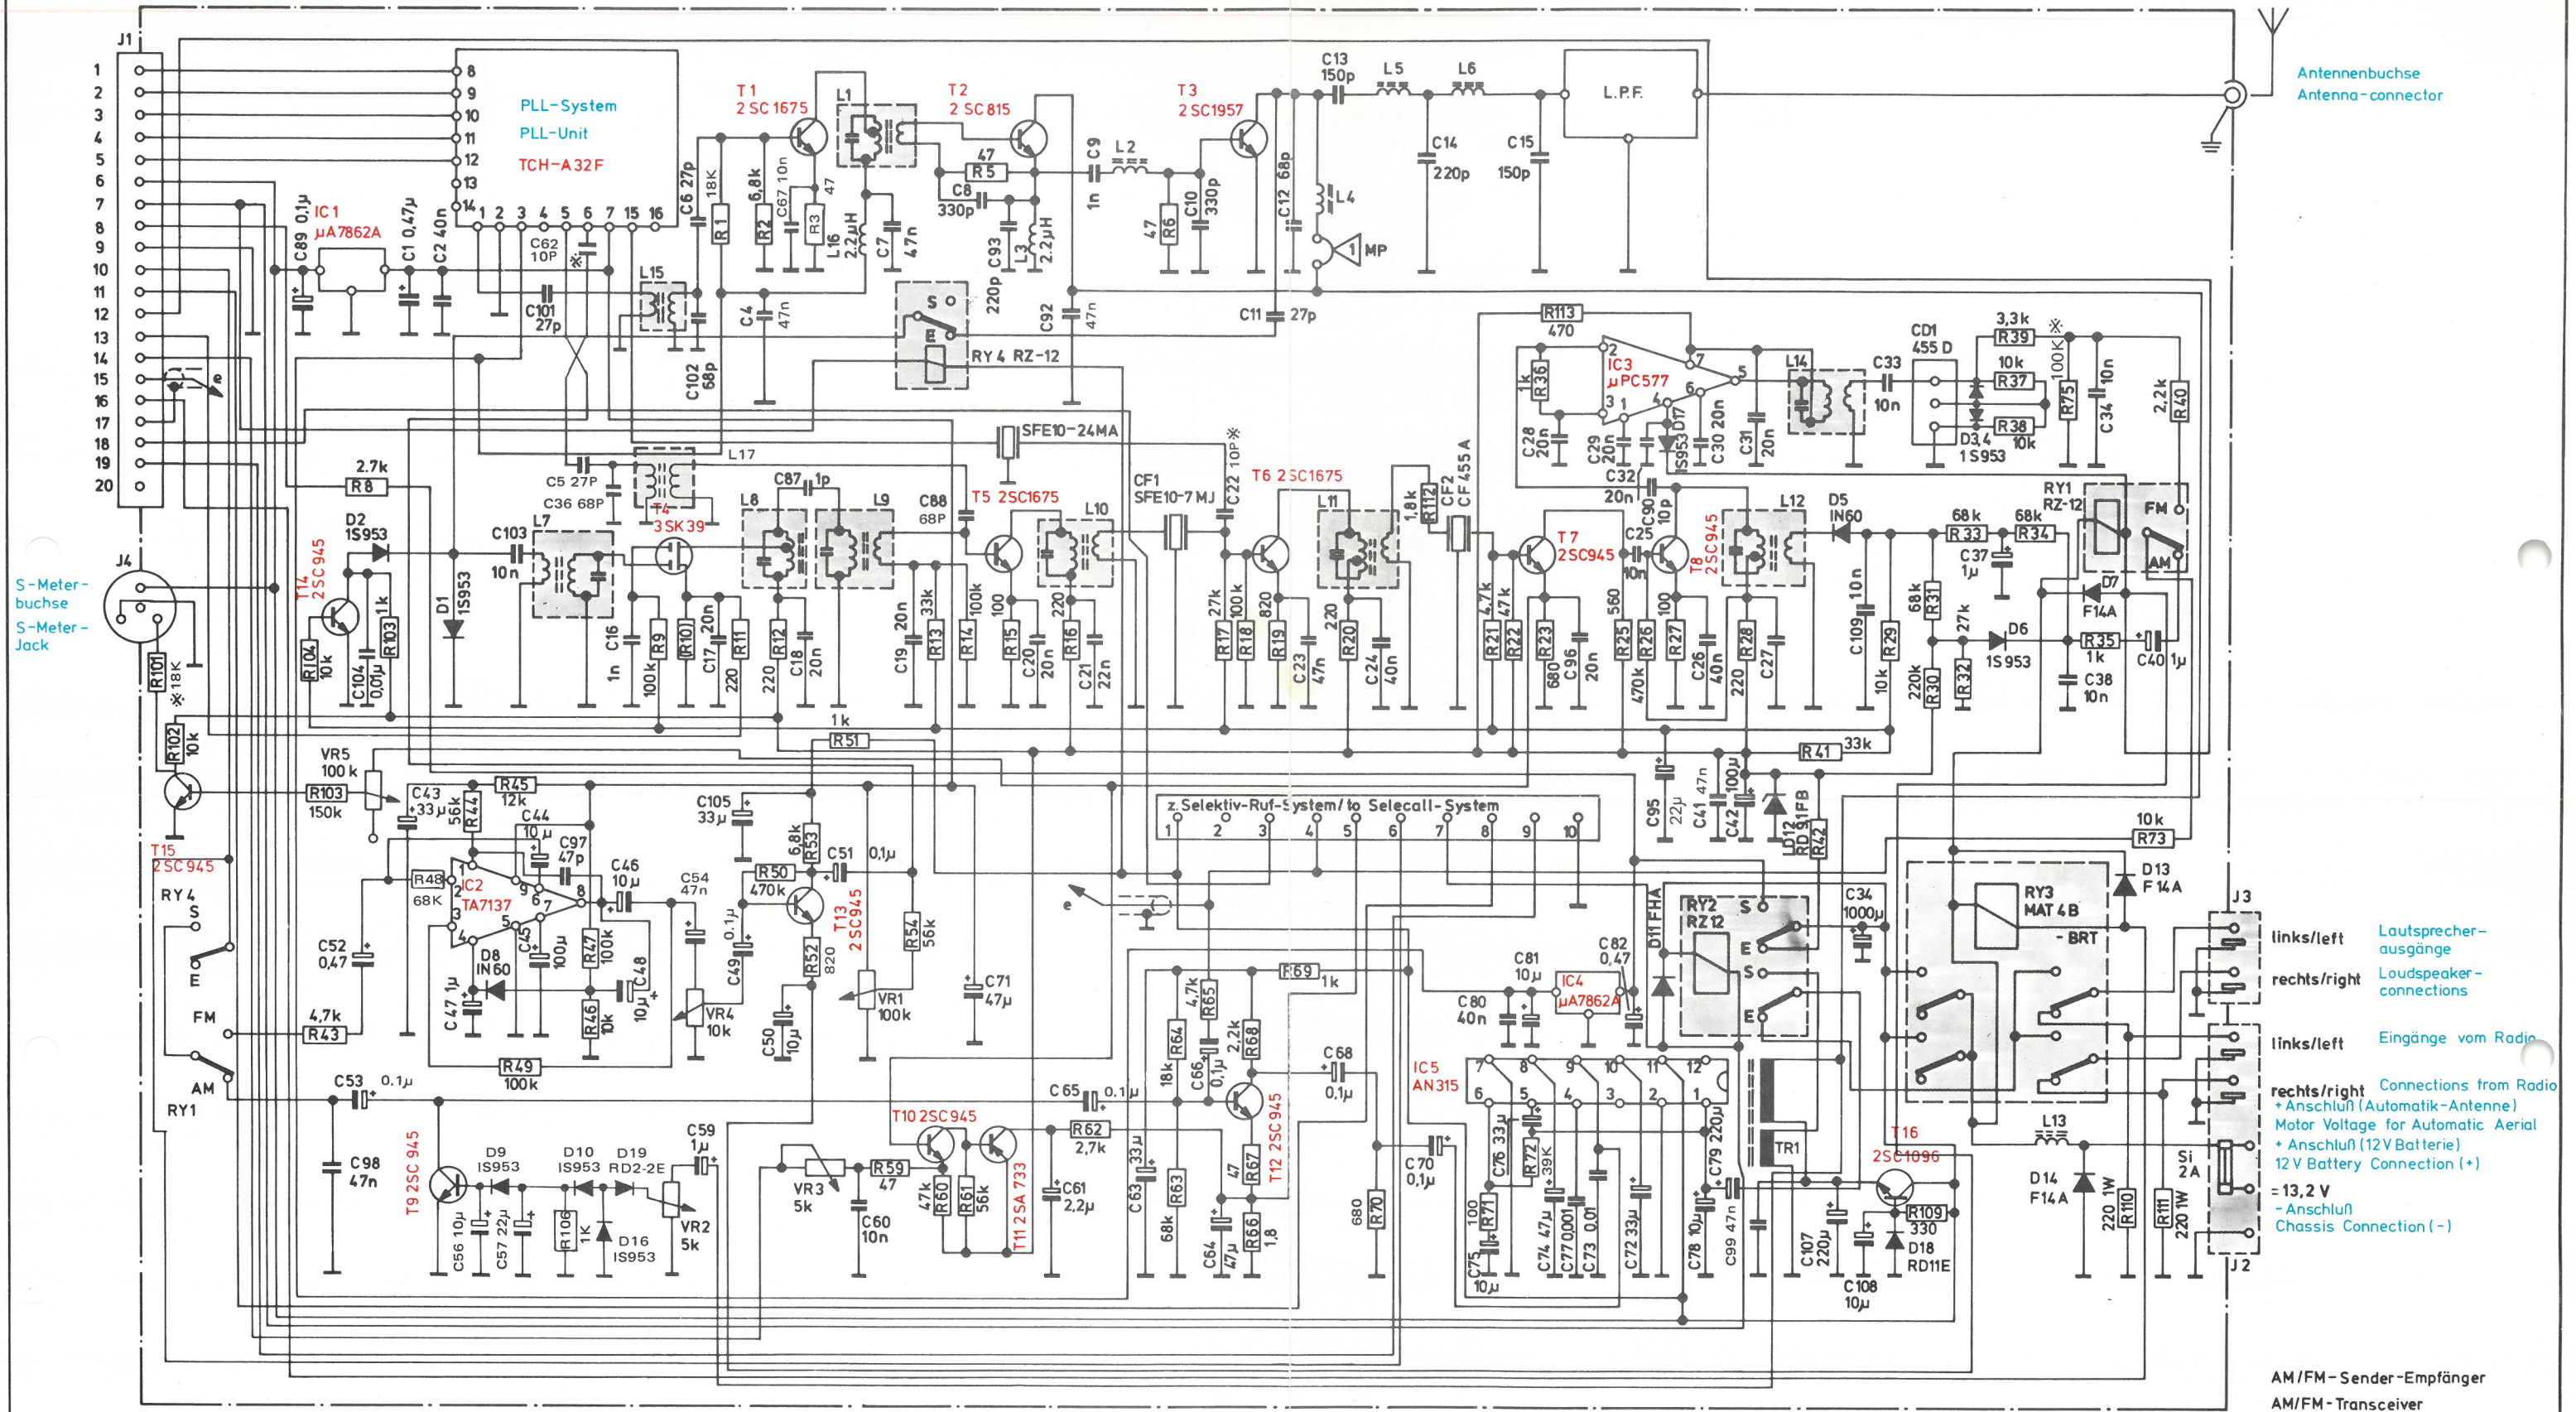

Antennenbuchse
Antenna-connector

S-Meter-
buchse
S-Meter-
Jack

links/left Lautsprecher-
ausgänge
rechts/right Loudspeaker-
connections

links/left Eingänge vom Radio
rechts/right Connections from Radio
+ Anschluß (Automatik-Antenne)
+ Anschluß (12V Batterie)
12V Battery Connection (+)
= 13,2 V
- Anschluß
Chassis Connection (-)

AM/FM-Sender-Empfänger
AM/FM-Transceiver


Schaltbild
CIRCUIT DIAGRAM

GRUNDIG

CB/AS 200

(E58007)

C	89,	104,	1, 2, 56,	103,101, 62,	5,16, 36,	6,102,17,4,	18,87, 67,	7,19	8,88,93,20,	92,9,21,	10,	22,	11,12,13,23,24,	14,	15,28,96,25,29,30,32,90,26,	31,27,	109,33,	37	34,38,	40,
	98,52,53,	43,	47, 57,	44,45,97,	46,48,	59, 54,	49,105,50,51,60,	71,	61,65,	63,	64,66,	68,	70,75,80,81,76,74,77,73,72,82,95,41,42,78,79,	99	107,	34,108,				
R	101,	704,8,	103,	106,	9,10,11,2,12,	3,	13,14,5,15,	16,	6,	17,18,19,	20,	112,	21,22,23,36,113,25,26,27,	28,	29,30,31,32,33,34,37,38,39,75,35,	40,				
	102,	43,103,	5,	44,	45,49,	46,47,	2,	4,	50,3,52,53,51,	1,59,54,60,61,	62,	63,64,65,66,67,68,69,	70,	71,72,	41,42,	109,	110,73,111,			

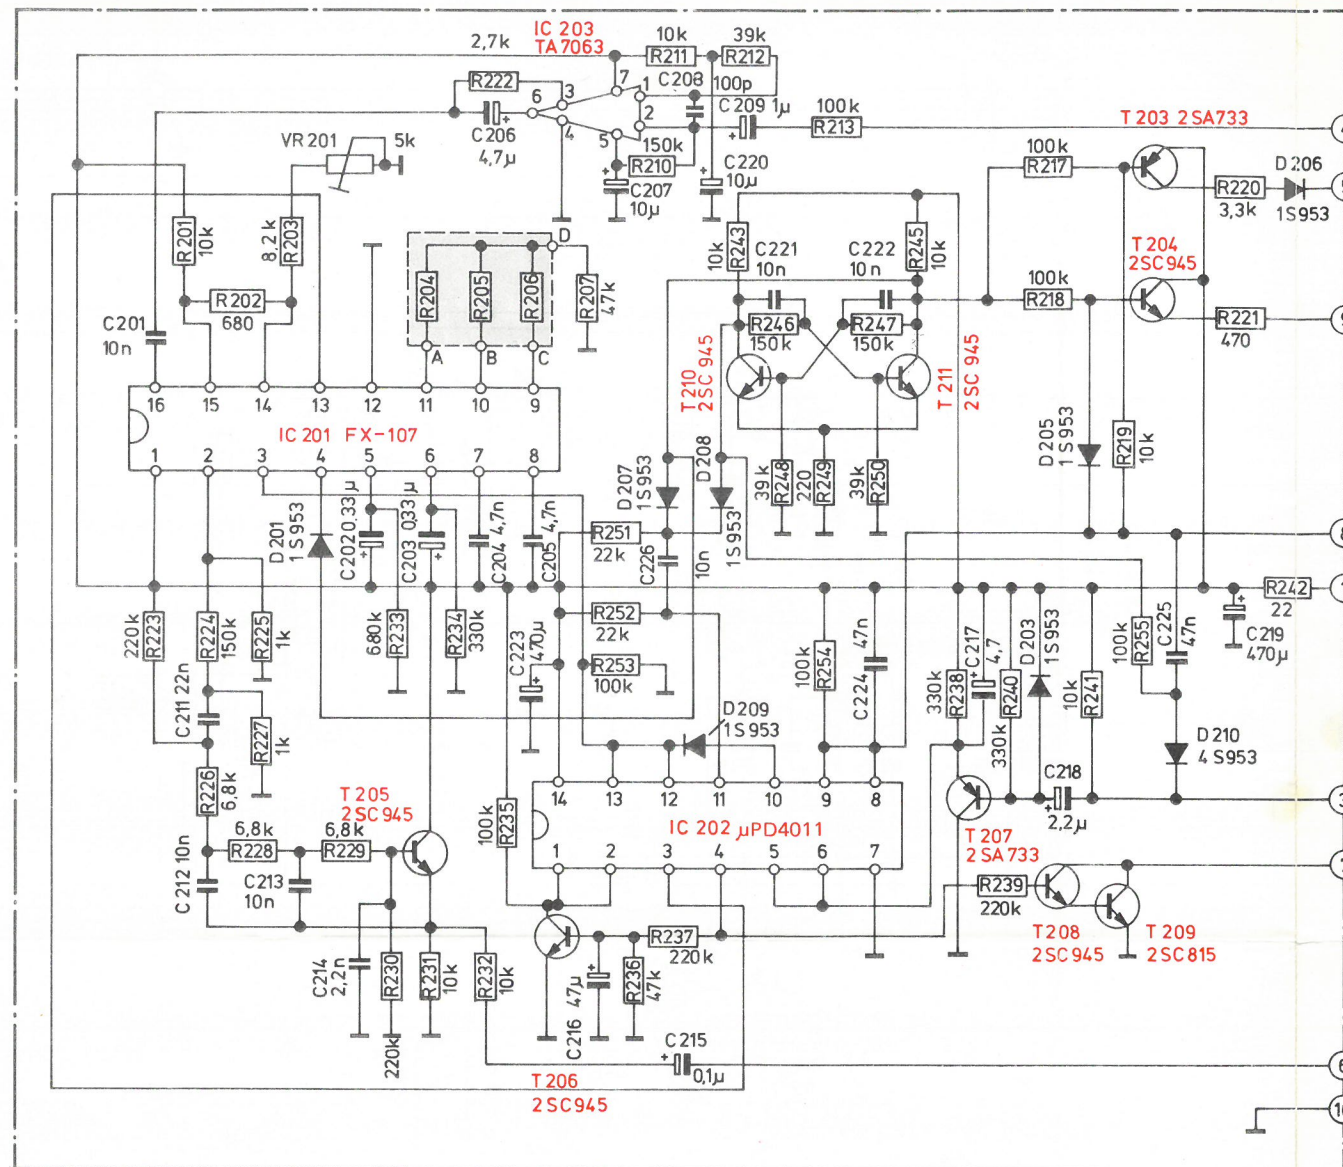


	1	2	3	4	5	6	7	8	9	10
Frequ. (Hz)	1057,5	1163	1269	1402	1530	1665,5	1828	2001	2203	2403
R 204 (kΩ)	102	88,7	77,7	65,7	56,2	48,1	39,7	32,4	23,7	18,7
R 205 (kΩ)										
R 206										

Codierung des Selektivruf-Systems
Coding of the Selectiv-Call-System

Änderungen vorbehalten
ALTERATIONS RESERVED

3-Ton-Selektivruf-System
3-Tone-Selecall-Unit

C	201, 211, 212, 213, 214, 223, 216, 215, 224, 217, 218, 225, 219,	202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255,
R	201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255,	201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255,

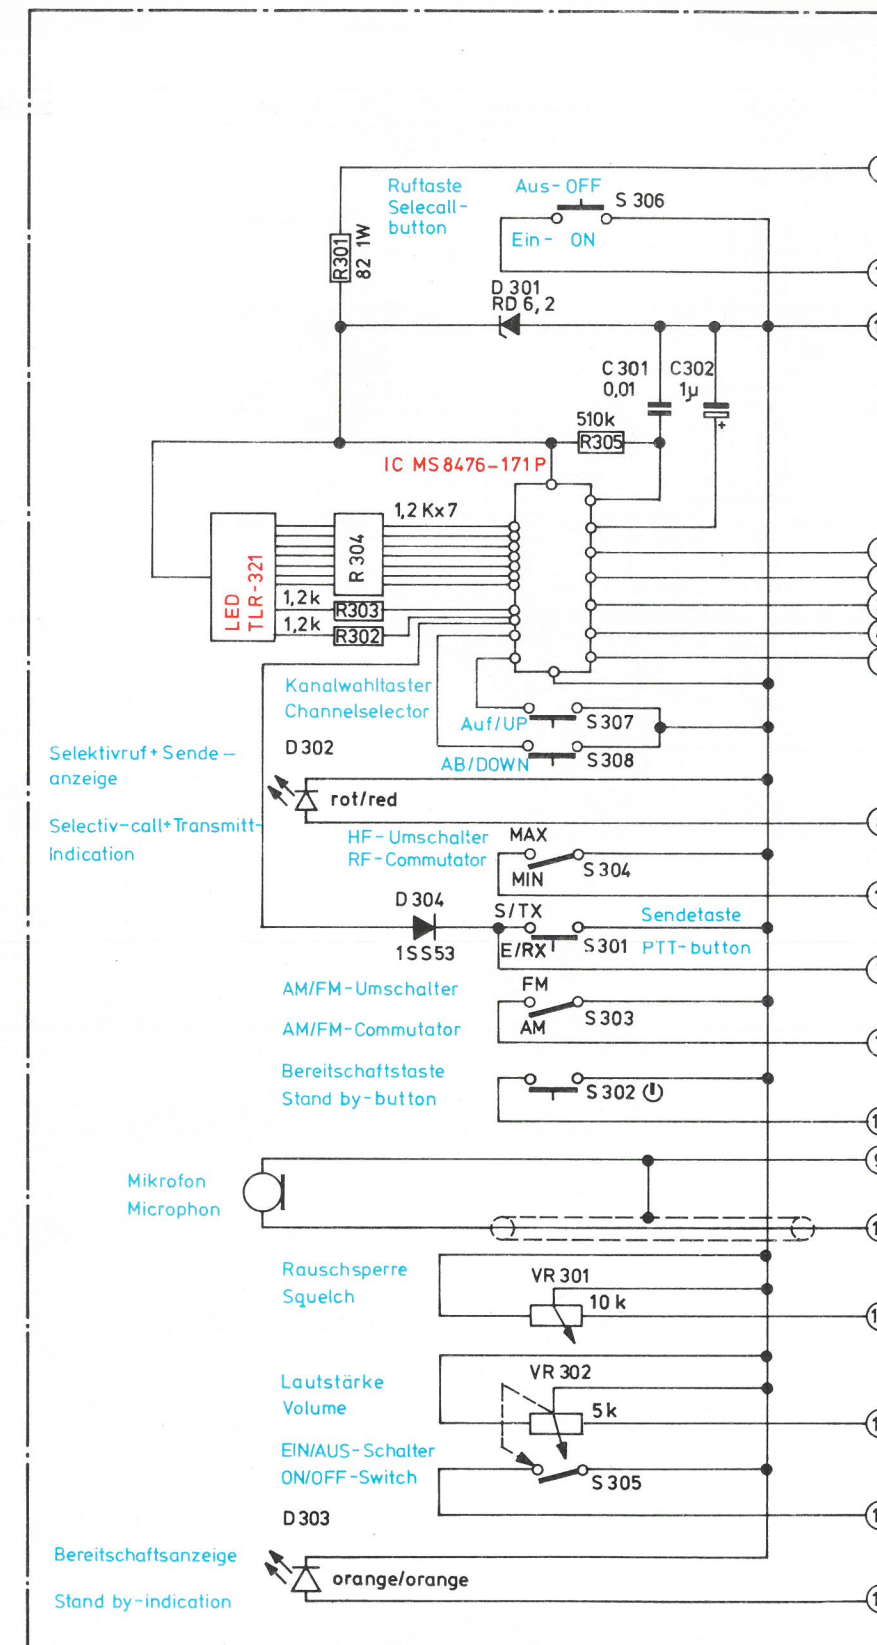

Fernbedienteil
Keyboard Command Module

C	301, 302,
R	301, 302, 303, 305,